
2003/02/01

Turbocharger (Industrial Engine) (SENR7410-04)


pillar Inc.

SMCS - 1052 SENR74100009

Remove Turbocharger (Industrial Engine)

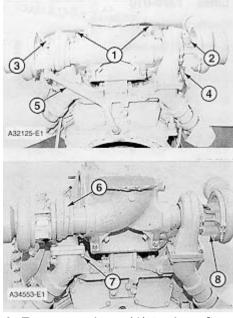


- 1. Remove pipes (1) to the aftercooler housing.
- 2. Remove turbocharger drain line (5) and drain line (4).
- 3. Remove oil supply line (3) and supply line (2).
- 4. Remove bolts (7).
- 5. Remove turbocharger (6).
- **6.** Remove turbocharger (7).

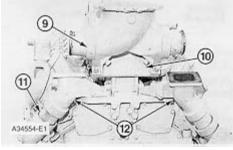

- 7. Remove exhaust pipe (9) from plate (10).
- 8. Remove plate (10)
- 9. Remove elbows (12) and couplings (11).

NOTE: Put covers on all turbocharger openings to keep dirt and debris out of turbocharger housing.

Install Turbocharger (Industrial Engine)

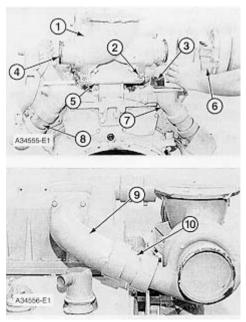


- **1.** Put **2P2333 Manifold Sealer** on the ends of couplings (8). Install couplings (8) and elbows (7). Remove any excess compound from the assembled joint.
- 2. Install plate (5) on the timing gear cover. Install exhaust pipe (1). Put 5P3931 Anti-Seize Compound on bolts (2).

30/11/22, 12:42 SIS 2.0

3. Put 2P2333 Manifold Sealer on the male ends of couplings (4). Put 5P3931 Anti-Seize Compound on the bolts that hold turbochargers (6) to elbows (7). Install gaskets (3) and turbochargers (6).

4. Put clean engine oil on the O-ring seals for pipes (10). Install pipes (10) and pipes (9) to the aftercooler housing.

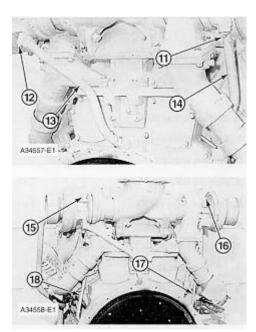

- 5. Put clean engine oil on the O-ring seals for drain lines (13) and (14). Install lines (13) and (14). Put 5P3931 Anti-Seize Compound on bolts (12) and (11) before installation.
- 6. Put oil supply lines (17) and (18) into position on the engine. Connect each line to the side of the engine block. Put 5P3931 Anti-Seize Compound on bolts (15) and (16). Install bolts (15) and (16).

PSP-000890C4 2022/11/30 15:42:34-03:00 SENR74100009 © 2022 Caterpillar Inc. Caterpillar: **Confidential Green**