


SMCS - 1355

SENR74100021


Remove Water Temperature Regulator

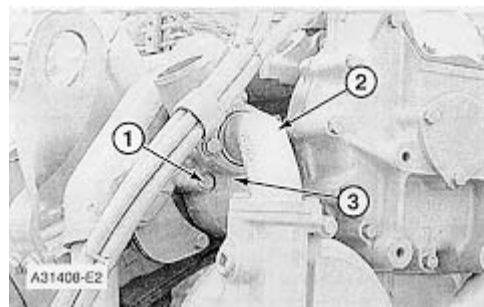

1. Drain the coolant to a level below elbow (2). Remove elbow (2).

2. Remove bolts (1). Remove temperature regulator housing (3).

3. Remove the seal from the housing (3).

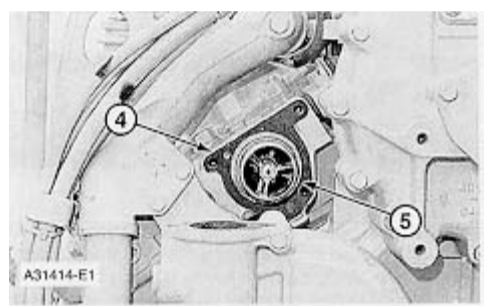


4. Remove temperature regulator (5) and gasket (4).


5. Do steps 1 through 4 for the other regulator.

Install Water Temperature Regulator

Tools Needed		A
1P0531	Handle	1
1P0489	Drive Plate	1
1P0483	Drive Plate (Pilot)	1

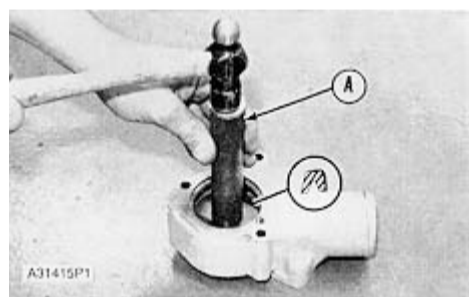

1. Install the seal in temperature regulator housing with Tool (A) as shown.

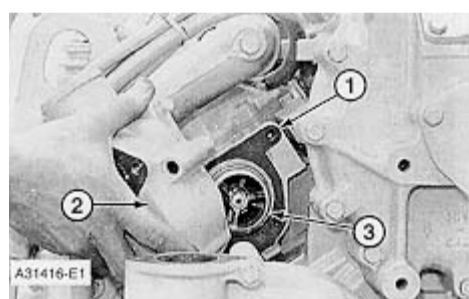

2. Install temperature regulator (3) and gasket (1) as shown.

3. Install housing (2).

4. Install elbow between housing (2) and the water pump.

5. Do steps 1 through 4 for the other regulator.

6. Fill the cooling system with coolant to the correct level.

PSP-000890C4

2022/11/30

15:51:45-03:00

SENR74100021

© 2022 Caterpillar Inc.

Caterpillar:

Confidential Green