



CRANE SCHEMATICS

SERIAL NUMBER: S4K8-4536

Notes:

1. Schematics are provided for troubleshooting only and should not be used for ordering parts. Do not use part numbers found on schematics for ordering parts.
2. Additional and/or replacement copies of this schematic set are available from the Link-Belt[®] Customer Information Center. Individual drawings are not available.
3. The crane serial number is required for each schematic set ordered. The crane serial number can be found on the Crane Rating Manual or Capacity Plate located inside the operator's cab. Providing the crane serial number will ensure the correct schematic set will be supplied.
4. A copy of this schematic set should always remain with the crane.