



# Installation, Operation and Maintenance

Mixer 4620







# Installation, Operation and Maintenance

## Mixer 4620

### Overview

#### Table of Contents

This publication contains the following topics:

#### Topic

Preface .....	5
Safety.....	7
Safety Regulations .....	8
Safety Regulations for Ex-Approved Products .....	13
Legal Issues .....	15
Approvals .....	16
Warranty.....	17
Practical Information.....	19
Data Plate Interpretation .....	20
Product Identity .....	24
Order parts .....	26
Dimensional drawings .....	27
Lifting Davit.....	28
Measurements for Brackets .....	29
Mixer .....	32
Install Lifting System .....	35
EU Declaration of Conformity .....	36
Mount Lifting Davit.....	37
Mount Lifting Equipment .....	40
Install Guide Bar System .....	43
Mount Single Guide Bar system .....	44
Install the Mixer.....	57
Install with Cantilever Bar System.....	58
Install with Bottom Fixing Plate .....	73
Electrical Installation.....	75
Power Supply.....	76
Connection .....	77
Cable Connection Diagrams.....	78
Cable Connection to Controller.....	80
Set up the Controller .....	81
First Start-Up .....	83
Trouble Shooting.....	85
If the Mixer Fails to Start .....	86
If the Mixer Starts but Motor Protection Trips .....	87
If the Mixer Starts, Stops and Starts in a Rapid Sequence.....	88



## Preface

### Purpose

The purpose of this manual is to give the reader information about how to install the product and its accessories.

---

### Recipient

The manual is principally intended for ITT Flygt

- service departments *and*
- customers.

---

### Contact

Please contact ITT Flygt documentation department if any information in this publication is

- missing
- difficult to find *or*
- irrelevant.

---

### Reference

More information about the product and how to handle it is available in the following documents:

- Parts List
- Service and Maintenance

---



# Safety

## Overview

---

### Table of Contents

This chapter contains the following topics:

<b>Topic</b>	
Safety Regulations .....	8
Environment.....	9
User Health and Safety.....	11
Safety Regulations for Ex-Approved Products .....	13

---

## Safety Regulations

### Introduction

It is extremely important that you read, understand and follow the warnings and safety regulations carefully before handling an ITT Flygt product. They are published to help prevent

- personal accidents and health problems
- damages to the unit
- product malfunction

### Reference

For ex-approved products also see Safety Regulations for Ex-approved Products in this book.

### Symbols

In the ITT Flygt documentation, admonitions are used together with the denomination.

The following items describes the safety levels of the admonition symbols in combination with the denomination.



#### **DANGER!**

Risk of causing

- severe injury to people
- death, *or*
- considerable damage to property

if the warning is ignored.



#### **WARNING!**

Possible risk of causing

- severe injury to people
- death, *or*
- considerable damage to property

if the warning is ignored.



#### **CAUTION!**

Risk of causing

- injury to people, *or*
- damage to property

if the warning is ignored.

### **NOTE!**

Information that is important for the proper operation of the product, but is not a risk to the safety of personnel.



**High Voltage**

Presence of a dangerous voltage.

---

## Environment

### NOTE!

All dangers due to electricity must be avoided. Therefore, pay attention to the risks due to electric shock or arc flash hazard. Also pay attention to the chemical and physical characteristics of the gas and/or vapors present in hazardous areas.

---

## Working areas

Observe these regulations and warnings for the working areas.

- The pump/mixer station must always be kept tidy and in good order.
  - If the product is used together with automatic level control, there is a risk of sudden start.
  - Warning signs for rotating propellers that start automatically must be positioned visibly.
- 

## Noise level

The noise level of the products is lower than 70 dB, but in some installations and at certain operating points on the performance curve the noise level of 70 dB may be exceeded.

---

## Distance to wet areas

When pumping or mixing near a lake or similar (e.g. jetties, beaches, ponds, fountains) there must be a safety distance of at least 20 m (65 ft) between the person and the product if the person is in contact with the pumped or mixed media.

The pump or mixer must never be placed directly into a swimming pool. If the product is intended to be used in connection with swimming pools, special safety regulations apply.

---

## Connections

Make sure that the

- product is isolated from the power supply and cannot be energized before starting work on it. This applies to the control circuit as well.
- thermal contacts are connected to a protection circuit intended for that purpose according to the products approval.
- cable and cable entry have not been damaged during the transportation before the unit is installed.

Intrinsically safe circuits are normally required for the automatic level control system by level regulator if mounted in zone 0.

---

## Ground connection

Observe these regulations and warnings for ground connections.

- All electric equipment must be grounded.  
This applies to pumps and mixers as well as to monitoring equipment.
- Make sure that the ground conductor is correctly connected by testing it.  
Failure to heed this warning may cause fatal accident.
- If persons are likely to come into physical contact with the product or media, e.g. on construction sites and farms, the grounded socket must have an additional ground fault protection device (GFI) connected to it.
- The ground conductor shall always be longer than the phase conductor. **Rationale:** If the motor cable is jerked loose by mistake, the ground conductor should be the last conductor to be disconnected from its terminal. This applies to both ends of the cable.

---

## Earth connection

Observe these regulations and warnings for earth connections.

- All electric equipment must be earthed.  
This applies to pumps and mixers as well as to monitoring equipment.
- Make sure that the earth conductor is correctly connected by testing it.  
Failure to heed this warning may cause fatal accident.
- If persons are likely to come into physical contact with the product or media, e.g. on construction sites and farms, the earthed socket must have an additional earth fault protection device connected to it.
- The earth conductor shall always be longer than the phase conductor. **Rationale:** If the motor cable is jerked loose by mistake, the earth conductor shall be the last conductor to be disconnected from its terminal. This applies to both ends of the cable.

---

## Recycling

Laws and regulations regarding recycling must be followed. If there are no laws or regulations, or the product is not accepted by an authorized recycling company, the product or it's parts can be returned to the nearest Flygt sales company or service workshop.

---

## Disposal of waste

All waste and emissions such as used coolant must be appropriately disposed of.

- Coolant spills must be cleaned up.
- Emissions to the environment must be reported.

---

## Reference

For electrical installation requirements, consult your local electric utility.

## User Health and Safety

### NOTE!

In order to minimize the risk of accidents, the following safety rules and local regulations must be followed.

---

### Precautions before working

Observe the following safety precautions before working with the product:

- Make sure that the product cannot roll or fall over and injure people or damage property.
  - Use lifting harness, safety line and a respirator as required.
  - Make sure that the lifting equipment is in good condition.
  - Provide a suitable barrier around the work area, e.g a guard rail.
  - Make sure you have a clear path of retreat.
  - Make sure there are no poisonous gases within the work area.
  - A first-aid kit must be close at hand.
- 

### Precautions when working

Observe the following safety precautions when working with the product:

- Never work alone.
- Use safety helmet, safety goggles and protective shoes and gloves.
- Make sure that the product has been thoroughly cleaned and rinse the components in water after dismantling.
- Stay clear of suspended loads.
- Always lift the product by its lifting device – never by the motor cable or the hose.
- Watch out for the starting jerk, which may be powerful.
- Check the explosion risk before welding or using electric hand tools.

**Risks:** Bear in mind the risk of:

- Drowning
  - Electrical accidents
  - Burn injuries
- 

### Health rules

The product is designed for use in liquids which can be hazardous to health.

In order to prevent injury to the eyes and skin, observe the following points when working on the product:

- All personnel who work with sewage systems must be vaccinated against diseases to which they may be exposed.
  - Observe strict cleanliness.
  - Always wear goggles and protective gloves.
  - Rinse the product thoroughly with clean water before starting work.
-



**Emergency instruction:  
Chemicals in eyes**

Follow these steps if hazardous chemicals have splashed into your eyes.

Step	Action
1	Hold your eyelids apart with your fingers and rinse your eyes immediately in running water for 15 minutes.
2	Contact an eye specialist.

**Emergency instruction:  
Chemicals on body**

Follow these steps if hazardous chemicals have splashed on your body.

Step	Action
1	Remove contaminated clothes.
2	Wash your skin with soap and water.
3	If required, seek medical attention.

## Safety Regulations for Ex-Approved Products

---

### Qualification of personnel

All work on an Ex-approved product must be carried out by certified electricians and by ITT Flygt authorized mechanics.

### NOTE!

Special rules apply to installation in explosive atmosphere. ITT Flygt disclaims all responsibility for work done by untrained, unauthorized personnel.

---

### Working areas



### WARNING!

Only Ex-approved products may be used in an explosive or flammable environment!

Observe these regulations and warnings for the working areas.

- FM approved products must not be installed in locations classified as hazardous in accordance with the national electric code, ANSI/NFPA 70–2005.
  - ATEX approved equipment must be installed in conformity to international, national and local standards (IEC/EN 60079–14).
  - Do not open the product while energized or in an explosive gas atmosphere.
  - The user must know about the risks due to the existence of electric current and the chemical and physical characteristics of the gas and/or vapour present in hazardous areas.
  - Before start working on the product, make sure that the product and the control panel are isolated from the power supply and cannot be energized. This applies to the control circuit as well.
- 

### Minimum water level

See the dimensional drawing of the product for minimum permitted water level according to the ATEX approval.

The product must run fully submerged. Level sensing equipment should be installed if the product could be operated at less than the minimum submergence depth, see dimensional drawing.

---

### Regulations concerning the equipment

Observe these regulations and warnings before working on the product or the equipment.

- The equipment must be installed in conformity to international, national and local standards (IEC/EN 60079–14).
- The maintenance operation must be made in conformity to the international, national and local standards (IEC/EN 60070–17).
- According to the ATEX directive, the Ex-product must never run dry or snore during normal operation. Dry running during service and inspection is only permitted outside the Ex area.
- Thermal contacts must be connected to a protection circuit according to the approval of the product.

- 
- The product may be used only in accordance with the approved motor data stated on the data plates.
  - Intrinsically safe circuits are normally required for the automatic level control system by level regulator if mounted in zone 0.
  - Yield stress of fasteners according to EN 50018 standard and ATEX approval.
-

## Legal Issues

### Overview

#### NOTE!

The purpose of this chapter is to give the reader an overview of legal issues such as standards, approvals and warranty of a product in general. For individual product approval information, see approval plate on the product or Declaration of Conformity.

---

### Table of Contents

This chapter contains the following topics:

#### Topic

Approvals .....	16
Warranty.....	17

---

---

## Approvals

---

### **Standard design**

All products are approved according to CSA standards in Canada and UL standards in USA.

The drive unit degree of protection follows IP68, see dataplate for max. submersion, according to standard IEC 60529.

All electrical ratings and performance of the motors comply with IEC 60034-1.

---

### **Explosion-proof design**

All explosion-proof products for use in explosive environments are designed in accordance with one or more of the following approvals:

- EN, ATEX Directive 94/9/EC, or/and
  - FM According to NEC
    - Class 1 Div 1 Groups "C" and "D"
    - Class 2 Div 1 Groups "E", "F", and "G"
    - Class 3 Div 1 Hazardous Locations
  - MSHA
-



---

## Warranty

### Qualification of personnel

All work on the product, standard or explosion-proof, must be carried out by certified electricians and ITT Flygt-authorized mechanics.

ITT Flygt disclaims all responsibility for work done by untrained, unauthorized personnel.

---

### Modification and spare parts

Modifications or changes to the product/installation should only be carried out after consulting with ITT Flygt.

Original spare parts and accessories authorized by ITT Flygt are essential for compliance.

The use of other parts

- can invalidate any claims for warranty or compensation *or*
- jeopardize explosion proof approvals.

### NOTE!

Only ex-approved spare parts and accessories authorized by ITT Flygt are allowed in ex-approved products.
---

---

### Warranty claim

For warranty claim, contact your ITT Flygt representative.

---



# Practical Information

## Overview

---

### Table of Contents

This chapter contains the following topics:

<b>Topic</b>	
Data Plate Interpretation.....	20
Data Plate.....	20
Approval Plate – FM approved version.....	21
Approval Plate – EN approved version.....	22
Product Identity.....	24
Order parts .....	26

---

## Data Plate Interpretation

### Introduction

The ITT Flygt product is always provided with data plates:

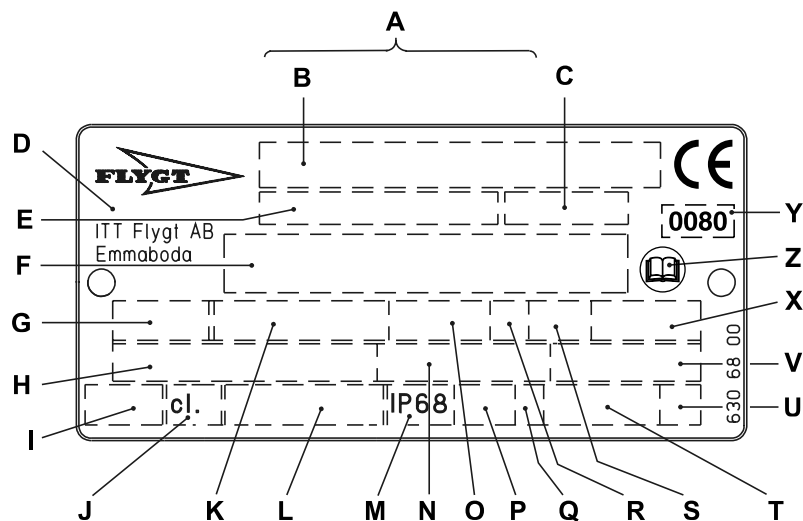
- The general data plate is used on all products.
- The approval plate is added to all explosion proof products.

### Data Plate

The product may only be operated within the parameters stated on the data plate.

### Illustration

This is an illustration of a general data plate.



### Field description

This table shows the fields on the general data plate, and which information each field contains.

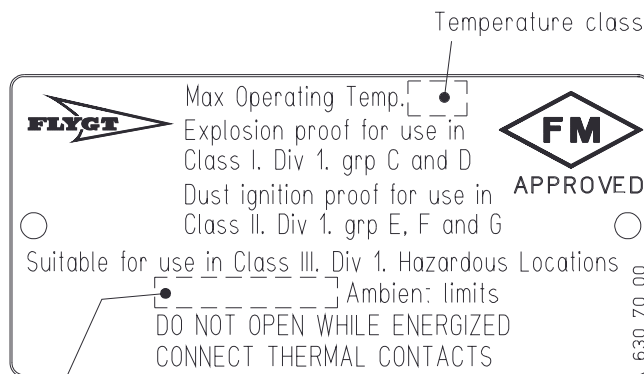
Field	Description	Field	Description
A	Serial number	N	Rated current
B	Product code	O	Rated speed
C	Curve code + number	P	Maximal submersion
D	Country of origin	Q	Direction of rotation: • L = Left • R = Right
E	Product number	R	Duty class
F	Additional information	S	Duty factor
G	Phase; type of current, frequency	T	Product weight

Field	Description	Field	Description
H	Rated voltage	U	Locked rotor code letter
I	Thermal protection	V	Power factor
J	Thermal class	X	Maximal ambient temperature
K	Rated shaft power	Y	Notified body (only for EN-approved Ex-products)
L	International standard	Z	Read Installation Manual
M	Degree of protection		

## Approval Plate – FM approved version

### Illustration

This is an illustration of an approval plate for the FM approved product version.

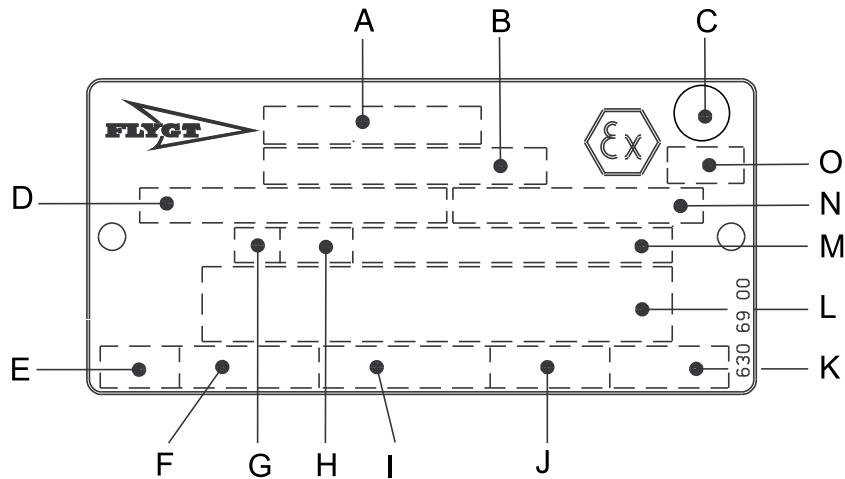


Max. ambient temperature

## Approval Plate – EN approved version

### Illustration

This is an illustration of an approval plate for the EN approved product version.



### Field description

This table shows the fields on the approval plate.

Field	Description	Field	Description
A	Approval	I	Input power
B	Approval authority + Approval Number	J	Rated speed
C	Approval for Class 1	K	Controller
D	Approved drive unit	L	Additional information
E	Stall time	M	Max. ambient temperature
F	Starting current / Rated current	N	Serial number
G	Duty class	O	ATEX marking
H	Duty factor	—	—

## Approval

The approval for the European version according to ATEX Directive 94/9/EC is shown on the Approval Plate with one of the following information:

- ⊕ IM2 EEx de I
- ⊕ IM2 EEx dI
- ⊕ II2G EEx de IIB T3
- ⊕ II2G EEx d IIB T3
- ⊕ II2G EEx d IIB T4

**Cable entry:** The approval for the cable entry has the following certificate number:

INERIS 02ATEX 9008 U


- ⊕ II 2 G or IM2 EEx dIIC or EEx dI
-

## Product Identity

### Sales denomination

The products identity is built up of the Sales Code (four digit) and two letters indicating hydraulic end and type of installation.

This is an example of a sales denomination.

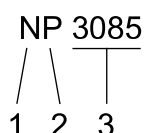


**Table:** This table explains what the letters and the numbers in the sales code stand for.

Code Position	Gives information about the...
1	hydraulic part
2	installation mode
3	sales code

### Product code

In each range the product's identity, Product Code, is made up of seven digits.

This is an example of a product code.

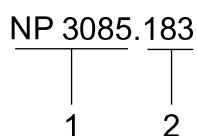

**Table:** This table explains what the product code is made up of:

Code position	Gives information about the ...
1	sales denomination
2	version



**Serial number** The serial number is used for identification of an individual pump/mixer.

This is an example of a serial number

NP 3085.183 - 951 0163

1                      2    3    4

**Table:** This table explains what the serial number is made up of:

Product code position	Gives information about the ...
1	product code
2	production year
3	production cycle
4	running number



---

## Order parts

---

### **Order**

When order spare parts, state serial number of the product, spare part number and quantity.

---

### **Requirements**

Genuine ITT Flygt parts must always be used for repairs if the product is to fulfill requirements and obtain official approval.

---

### **Qualification of personnel**

Only ITT Flygt or Flygt-authorized service personnel may undertake repair work on Ex-approved products.

---

## Dimensional drawings

### Overview

---

#### Table of Contents

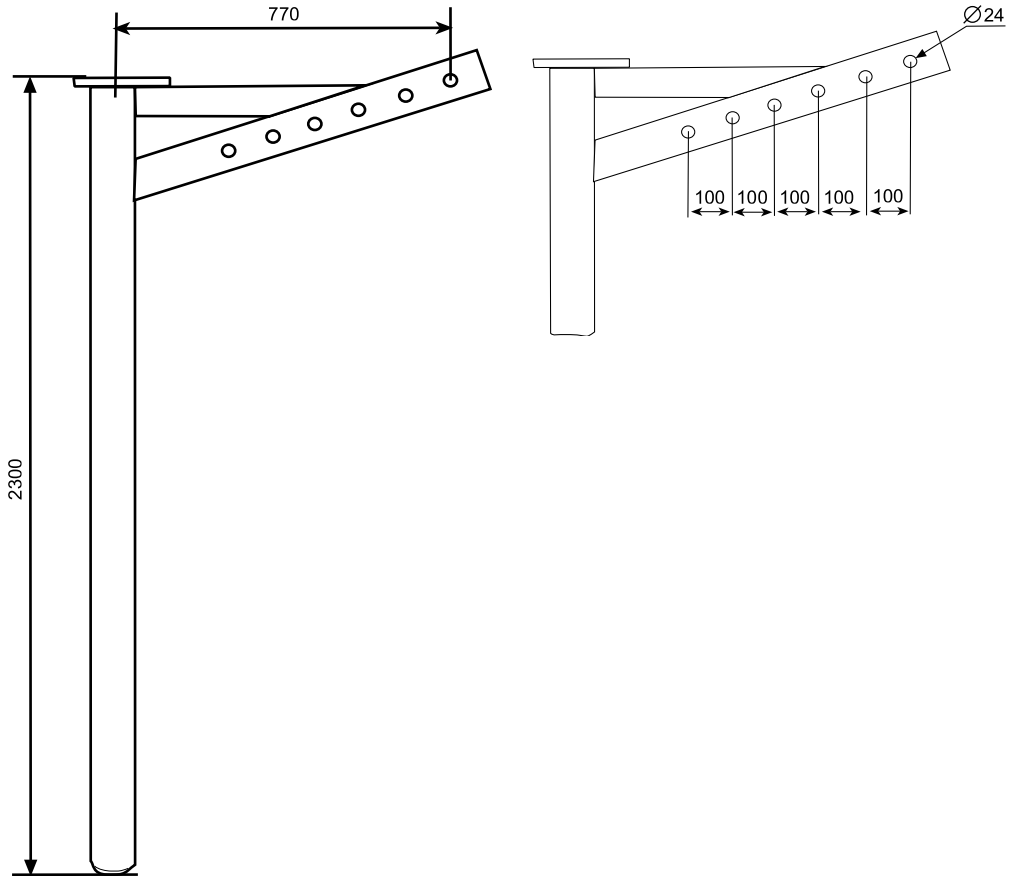
This chapter contains the following topics:

<b>Topic</b>	
Lifting Davit.....	28
Davit 150 .....	28
Measurements for Brackets .....	29
Cantilever system.....	29
Bottom Fixing Plate System .....	31
Mixer.....	32
Cantilever Bar .....	32
Single Guide Bar .....	33

---

# Lifting Davit

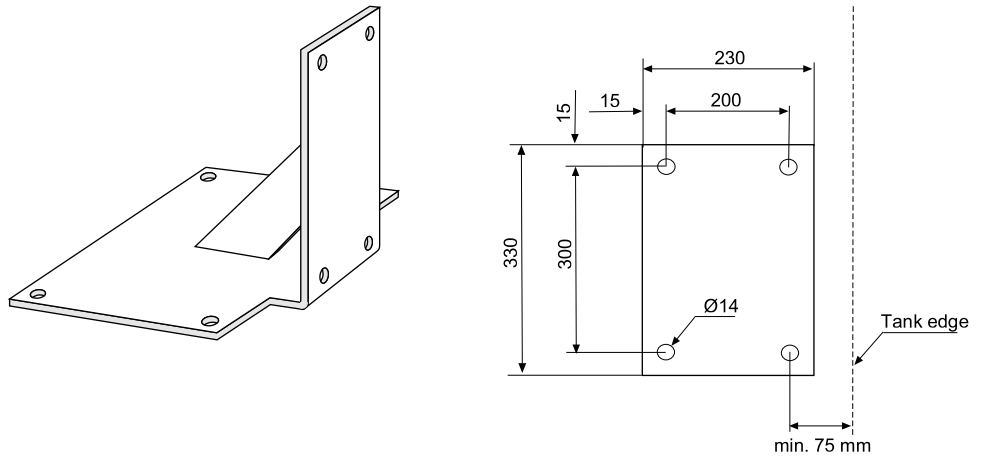
## Davit 150



## Measurements for Brackets

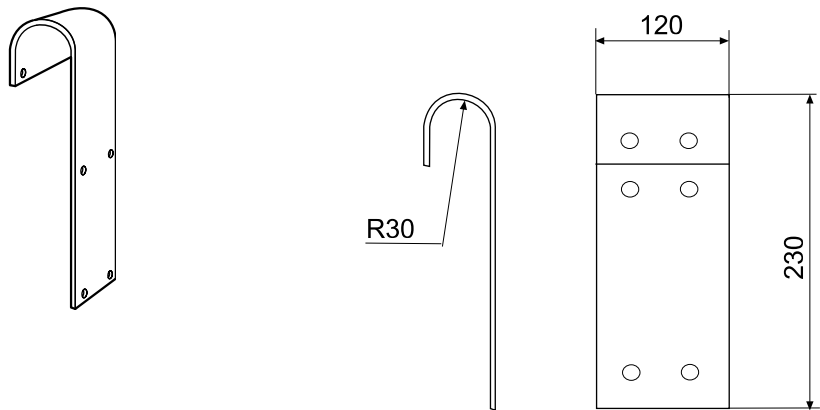
### Cantilever system

**Floor Bracket** This illustration shows how to position the floor bracket.



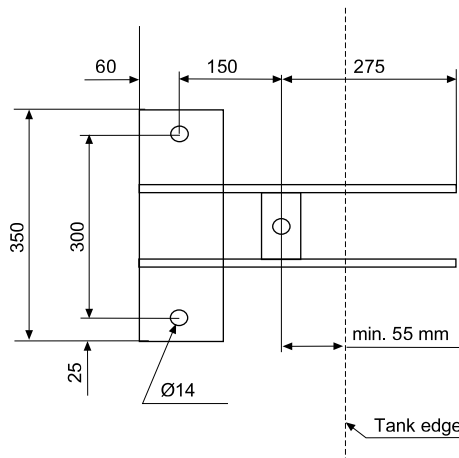
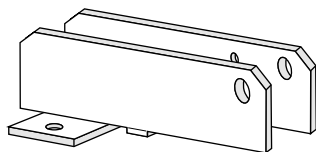
### Hanging Bracket

This illustration shows how to position the hanging bracket.



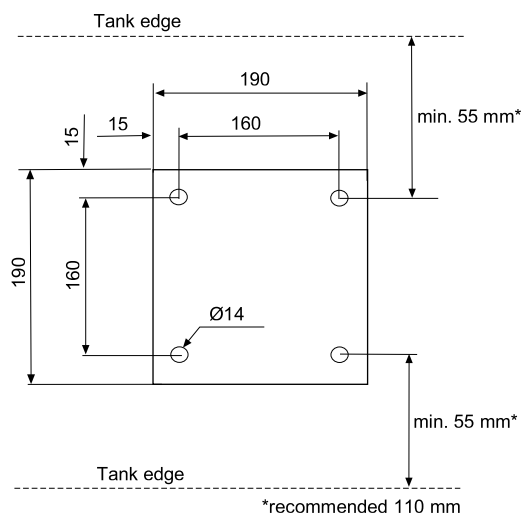
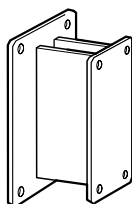
**Adjustable Bracket**

This illustration shows how to position the adjustable bracket.



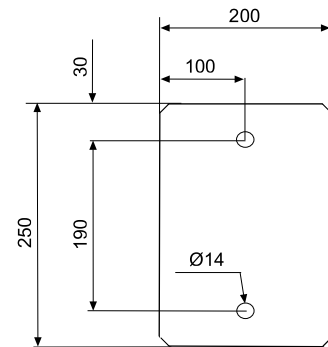
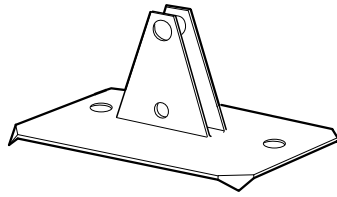
**Wall Bracket**

This illustration shows how to position the wall bracket.



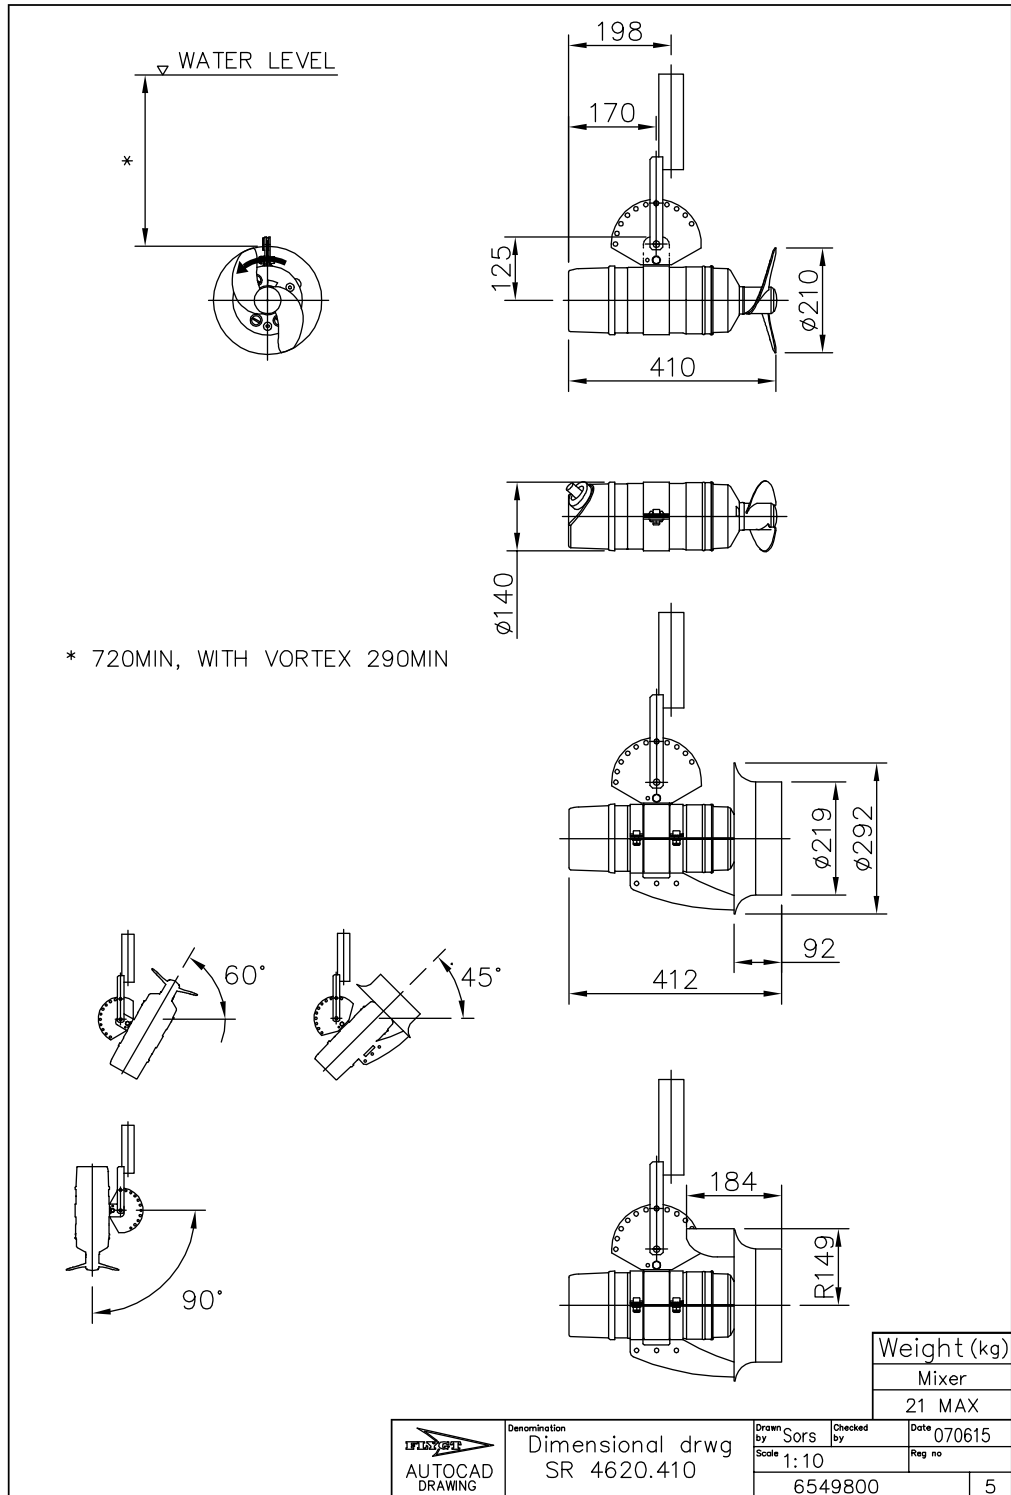
**Bottom Fixing Plate System**

This illustration shows how to position the bottom fixing plate.



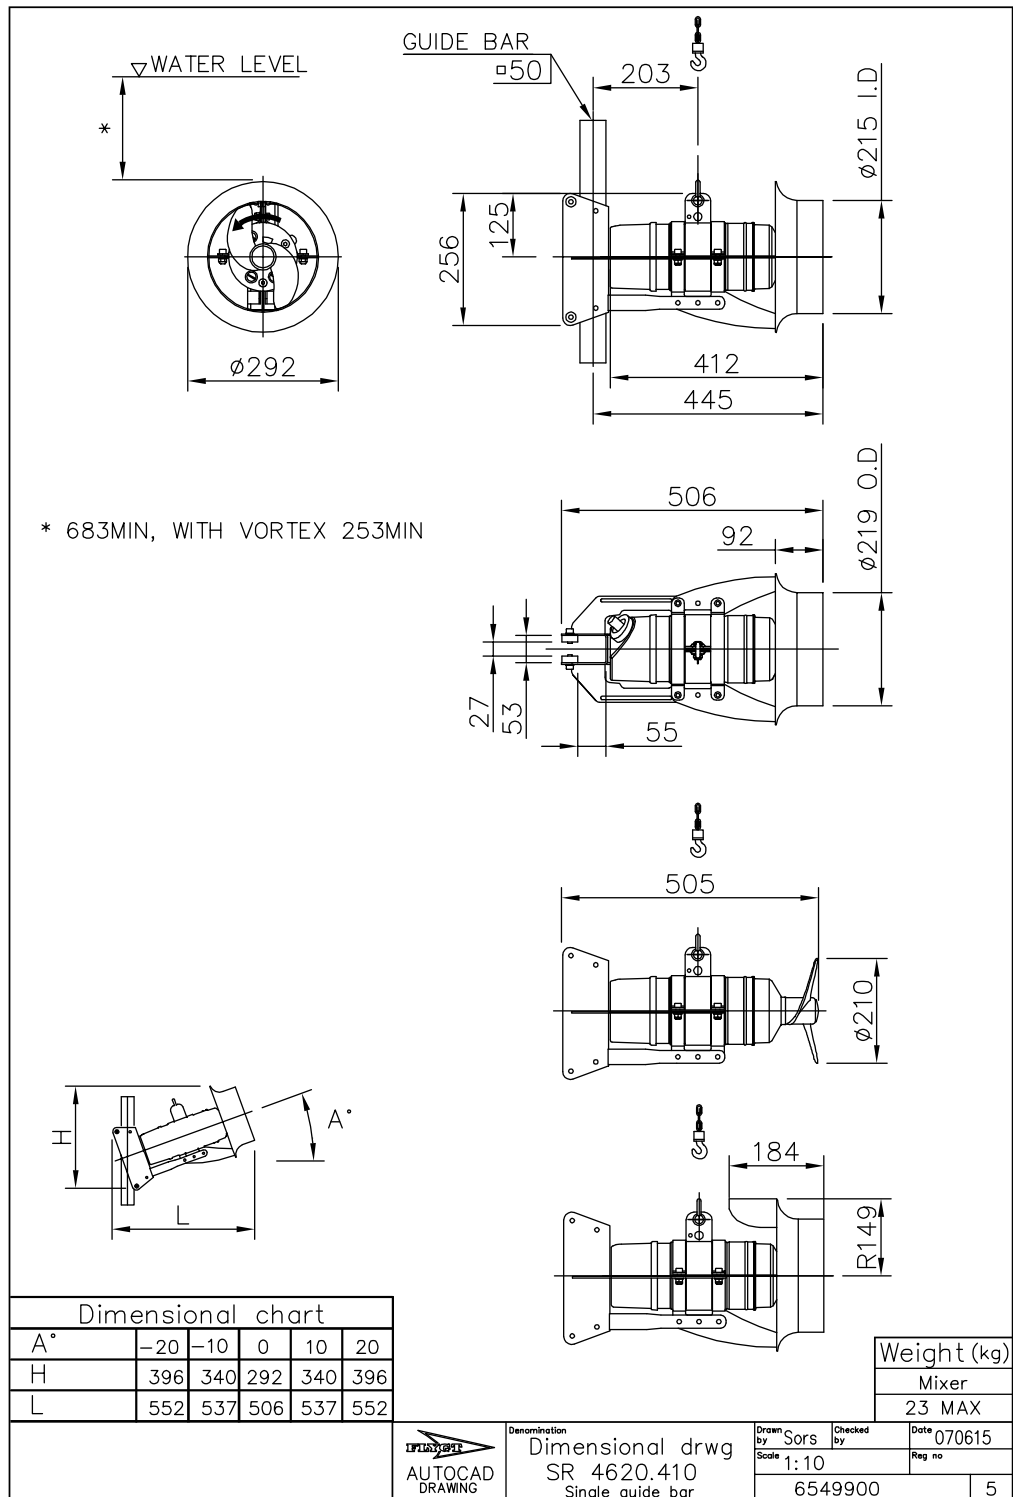
# Mixer

## Cantilever Bar





### Single Guide Bar





# Install Lifting System

## Overview

### Introduction

1 This chapter describes how to mount the lifting system.

---

### Table of Contents

This chapter contains the following topics:


<b>Topic</b>	
EU Declaration of Conformity .....	36
Mount Lifting Davit .....	37
Mount Lifting Equipment .....	40

---



## EU Declaration of Conformity

**Lifting system** This is a EU declaration of conformity valid for lifting davits.

		<b>EU declaration of conformity</b>	
An <b>ITT Industries</b> company			
<b>Manufacturer:</b>	Company name:	<b>ITT Flygt AB</b>	
	Address:	<b>S-361 80 EMMABODA</b>	Telephone: <b>+46 471 24 70 00</b>
		<b>SWEDEN</b>	
<b>Hereby certify that:</b>			
<b>Davit:</b>	Type:	150 kg	Part number: 623 11 00/01 + 622 98 00/01 / 623 04 00/01
		300 kg	624 27 00/01 + 623 55 00/03 / 623 59 00/01
		320 kg	624 26 00/01 + 623 55 00/03 / 623 59 00/01
		600 kg	624 28 00/01 + 623 55 00/03 / 623 59 00/01
<ul style="list-style-type: none"><li>• has been manufactured in accordance with the COUNCIL'S DIRECTIVE concerning convergence of the legislation of Member States with regard to Machinery (98/37/EC (89/392/EEC) + 91/368/EEC + 93/44/EEC + 93/68/EEC), EMC (89/336/EEC).</li><li>• has been manufactured in accordance with the following harmonized standards and technical spec. EN 292/1, EN 292/2.</li><li>• National standard DIN 15018 Teil 1, DIN 15020 Blatt 1+2, DIN 15021, VBG 8, VBG 9, VGB 9a (Davit 300, 320, 600 kg).</li><li>• National standard NF E 52110 (Davit 150 kg).</li></ul>			
Title:	Technical Manager		Name: Peter Uvemo
Company name:	<b>ITT Flygt AB</b>		Signature: <i>Peter Uvemo</i> Date: 2003-09-15

## Reference

The EU declaration of conformity valid for machines is attached separately together with the machine.

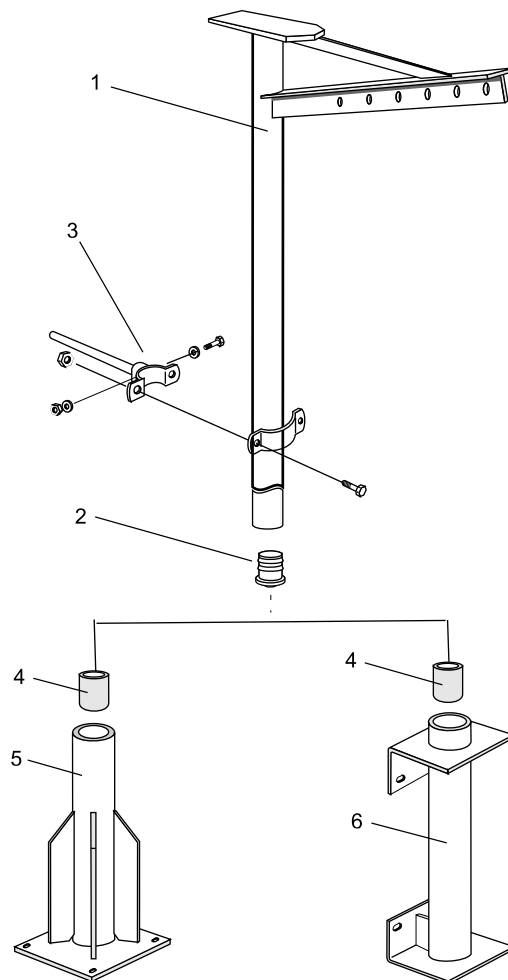
## Mount Lifting Davit

### Introduction

This section describes how to mount the lifting davit 150. For measurements, see [Dimensional Drawings](#).

### NOTE!

All mounting to the floor shall be made with **chemical anchor bolts** from ITT Flygt.

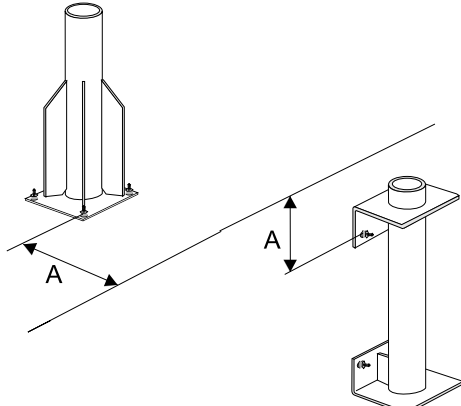
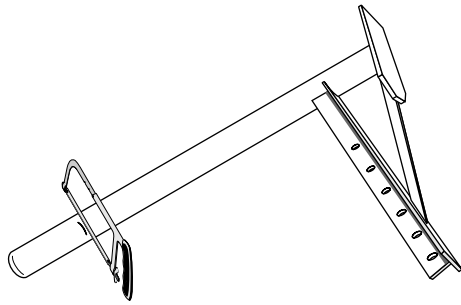


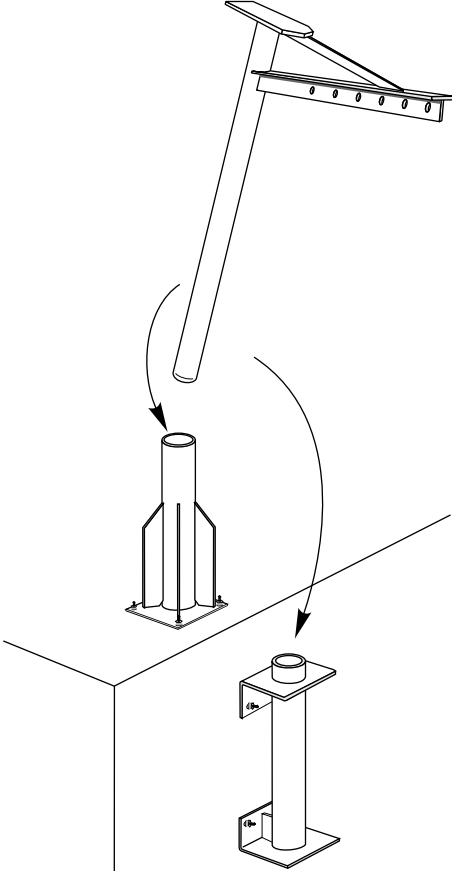
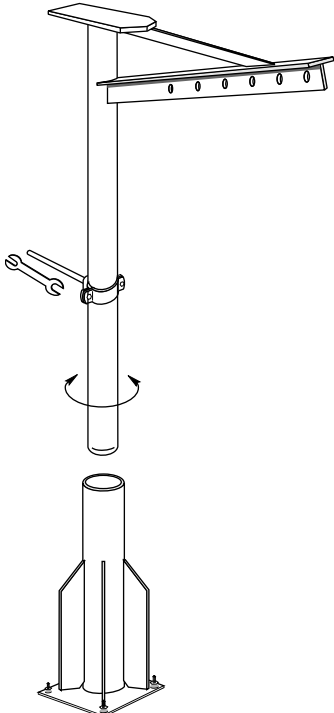
### Lifting davit 150

**List:** This is a list of the parts of the lifting davit:

1. Lifting davit
2. Sleeve
3. Operating bar
4. Sleeve
5. Davit holder, floor mounted
6. Davit holder, wall mounted

**Instruction** Follow these steps to mount the Lifting Davit 150.

Step	Action	Illustration
1	<ul style="list-style-type: none"> <li>• Position the davit holder.</li> <li>A = minimum 55 mm, recommended 110 mm. .</li> <li>• Fasten it with chemical anchors.</li> <li>Maximum torque = 60 Nm</li> </ul>	
2	<ul style="list-style-type: none"> <li>• Adjust the pipe to proper length. Remove the sleeve and cut the pipe.</li> <li>• Reassemble the sleeve.</li> </ul>	

Step	Action	Illustration
3	<ul style="list-style-type: none"> <li>• Check that the sleeves are positioned at the pipe end and at the top of the davit holder.</li> <li>• Fit the lifting davit pipe unit in the davit holder.</li> </ul>	
4	<ul style="list-style-type: none"> <li>• Fit the operating bar in position.</li> <li>• <b>Note!</b> Make sure it is adjusted to be easy to rotate when installing or removing the mixer.</li> <li>• Secure the operating bar in position by using the clamp.</li> </ul>	

## Mount Lifting Equipment

### Introduction

This section describes how to mount the lifting equipment such as winch, chain, block and tackle to the lifting davit.

### NOTE!

All mounting to the floor shall be made with **chemical anchor bolts** from ITT Flygt.

The winch may be mounted to the

- davit pipe *or*
- davit unit

### Maximum load — winch

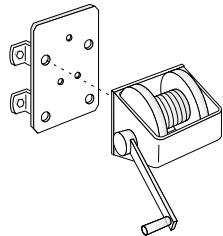
This table describes the maximum load of the available winches.

Winch with...	Max. load
two corner blocks	150 kg
one corner block	80 kg

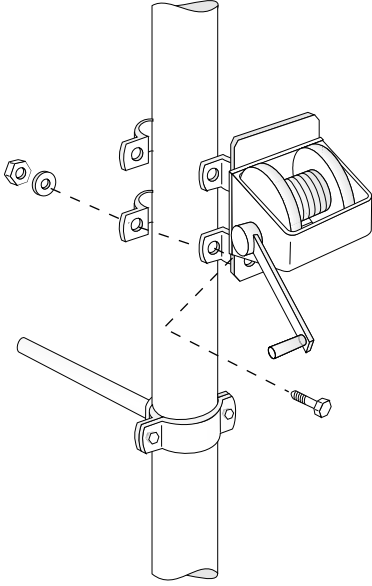
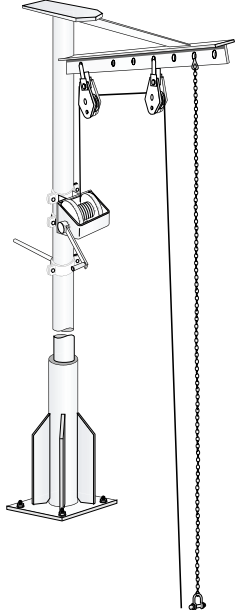
For each winch there is a purpose-made winch bracket.

### Instruction

Follow these steps to mount the lifting equipment to the davit.

Step	Action	Illustration
1	Fit the winch to the bracket by using the provided bolts. <b>Check</b> that the “top” and “bottom” marks are correctly positioned.	



Step	Action	Illustration
2	Fit the winch to the davit pipe or the davit unit in a suitable position where the height setting is easily adjustable. <b>Check</b> <ul style="list-style-type: none"> <li>• that the center of the drum is in line with the center line of the davit arm. Lock it in position on the davit pipe by using the clamping nuts.</li> <li>• that the winding handle is on the right side.</li> </ul>	
3	Place the cord pulley or block and tackle in position. <b>Check</b> that the handling chain or wire is vertical.	



**Chain, Block and Tackle**

This table shows the available lengths and maximum loads.

Lifting equipment	Maximum load Kg	Available lengths m
Calibrated lifting chain	500	5, 9 or 20
Chain links with hook and shackle	500	0.75
Corner block	400	
Block and tackle	500	

# Install Guide Bar System

## Overview

### Introduction

1 This chapter describes how to install the guide bar systems.

2

### NOTE!

All mounting to the floor shall be made with <b>chemical anchor bolts</b> from ITT Flygt.
---

---

### Table of Contents

This chapter contains the following topics:

#### Topic

Mount Single Guide Bar system .....	44
Mount without intermediate support .....	44
Mount with intermediate support.....	48

---

## Mount Single Guide Bar system

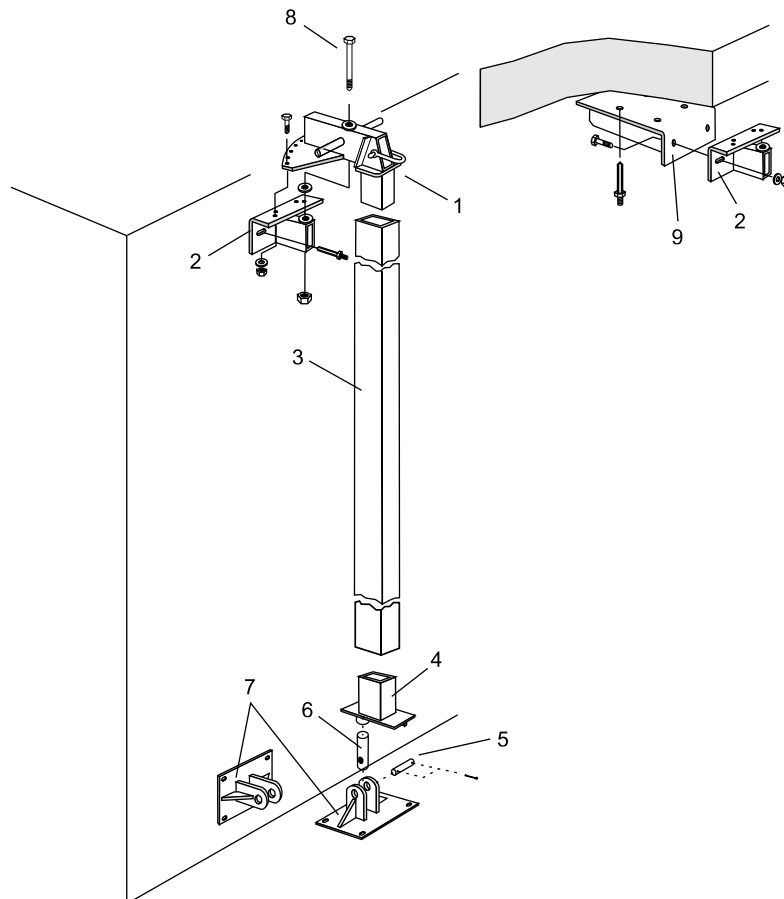
### Introduction

This chapter describes how to install a single guide bar system with or without intermediate support.

### Mount without intermediate support

### Illustration

This is an illustration of a single guide bar system up to 6 m, without intermediate support.



**List:** This is a list of the general parts of the single guide bar system without intermediate support:

1. Upper guide
2. Upper bracket
3. Guide bar
4. Lower guide
5. Lower bracket pin
6. Lower guide pin

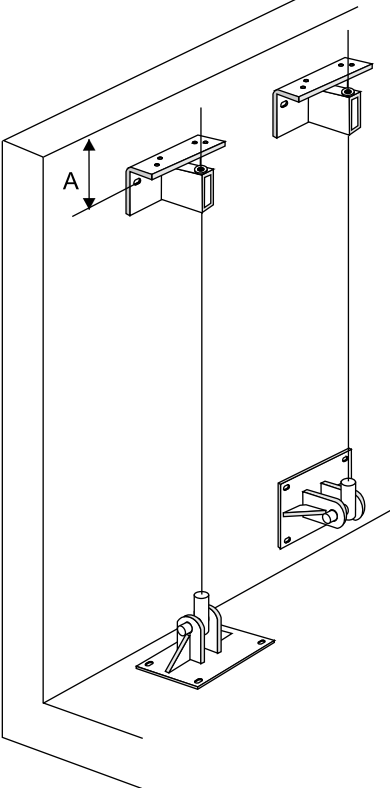
7. Lower bracket
8. Upper guide retaining bolt
9. Upper bracket, under floor

**NOTE!**

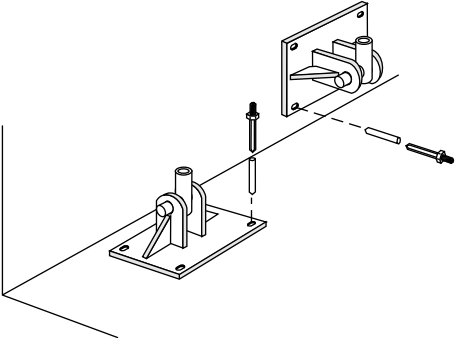
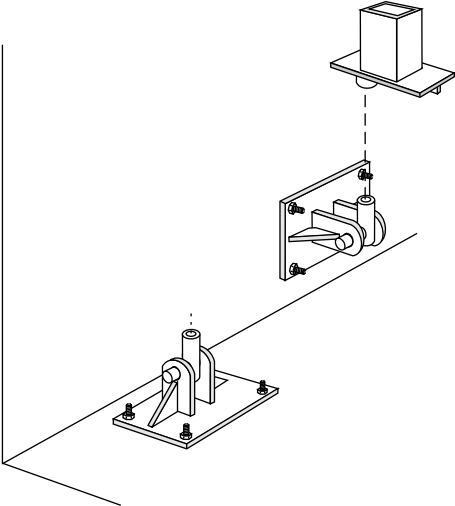
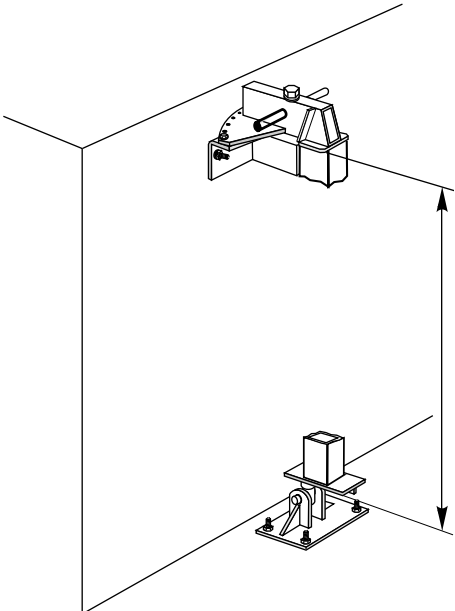
The lower bracket may be fixed to the bottom or the wall of the tank.

**Instruction**

Follow these steps to install single guide bar system without intermediate support:

Step	Action	Illustration
1	Position the guide brackets. A = minimum 65 mm, recommended 125 mm.	

Step	Action	Illustration
2	Fix the upper bracket.	
3	<p>Check</p> <ul style="list-style-type: none"> <li>• the position of the lower bracket.</li> <li>• that the pin in the lower bracket is in line with the center line of the upper bracket. Use a plumb line.</li> </ul> <p><b>Wall mounted bracket:</b> It may be necessary to put metal shims under one of the brackets to achieve a vertical axis of rotation.</p>	

Step	Action	Illustration
4	Fix the lower bracket.	
5	Fit the lower guide to the lower bracket by positioning it on the pin.	
6	<ul style="list-style-type: none"> <li>• Measure the distance between the lower and the upper guides.</li> <li>• Subtract 10 mm from the measurement and cut the guide bar there</li> </ul> <p><b>Note!</b> Make sure that the cut end of the guide bar points downwards.</p>	

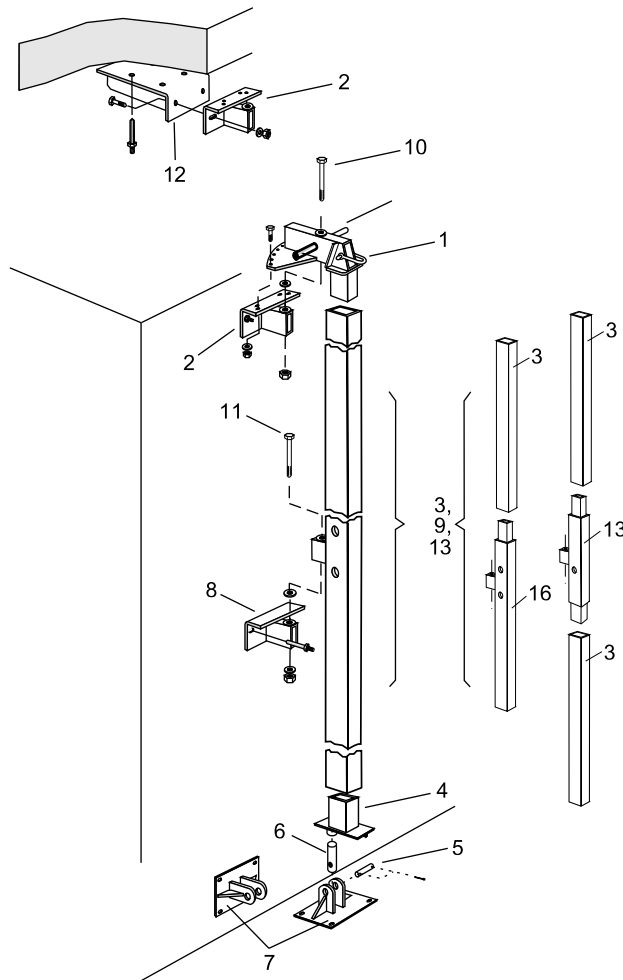
Step	Action	Illustration
7	<ul style="list-style-type: none"> <li>• Insert the bar to the lower guide.</li> <li>• Insert the upper guide to the bar.</li> <li>• Fit the bolt, but do not tighten.</li> </ul>	
8	<ul style="list-style-type: none"> <li>• Turn the guide bar unit to required angle.</li> <li>• Fix the angle H with the indexing screw.</li> <li>• Mount the shackle to the upper bracket.</li> </ul> <p>See, <a href="#">Positioning the mixer</a>, for correct angle setting.</p>	
9	<p><a href="#">Install the mixer on the single guide bar system.</a></p>	

## Mount with intermediate support



## Illustration

This is an illustration of a single guide bar system over 6 m with intermediate support.



**List:** This is a list of the general parts of the single guide bar system with intermediate support:

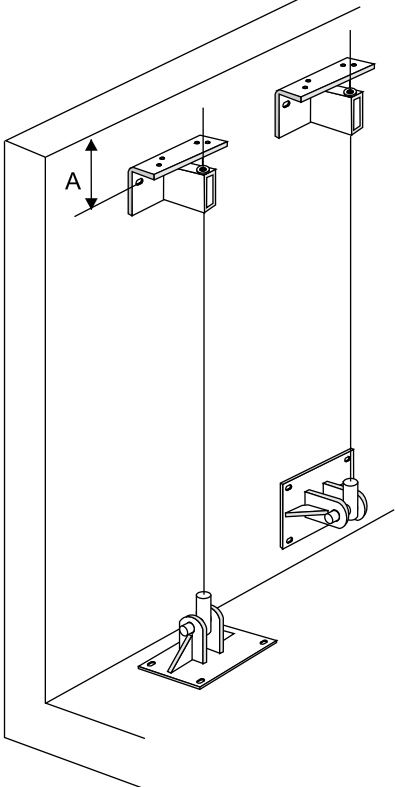
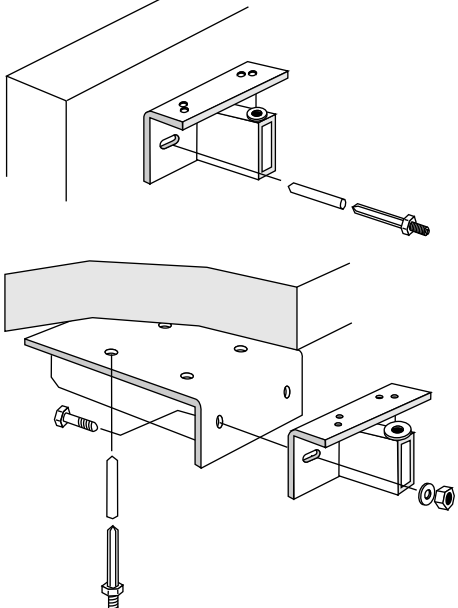
1. Upper guide
2. Upper bracket
3. Guide bar
4. Lower guide
5. Lower bracket pin
6. Lower guide pin
7. Lower bracket
8. Intermediate bracket
9. Extension bar
10. Upper guide retaining bolt
11. Intermediate guide retaining bolt
12. Upper bracket, under floor — alternative
13. Extension bar — alternative

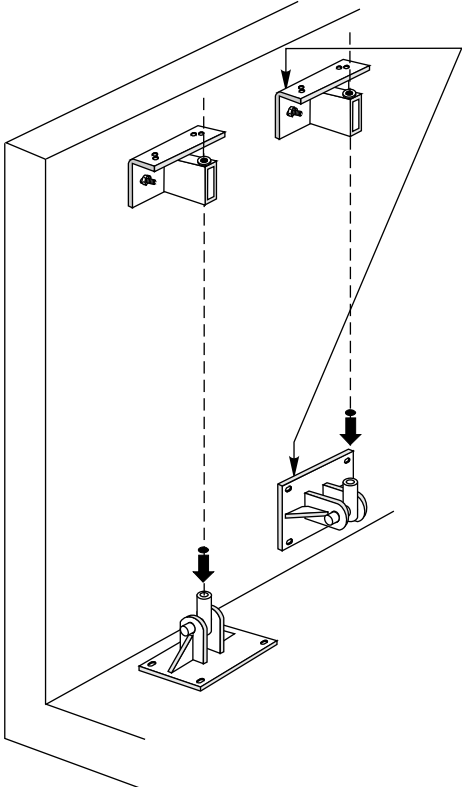
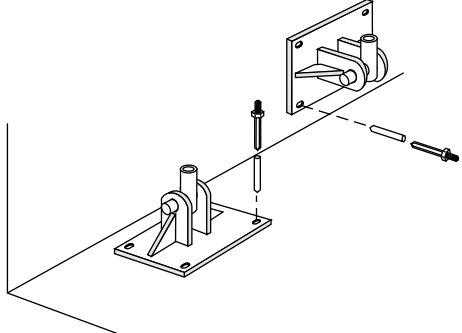
## NOTE!

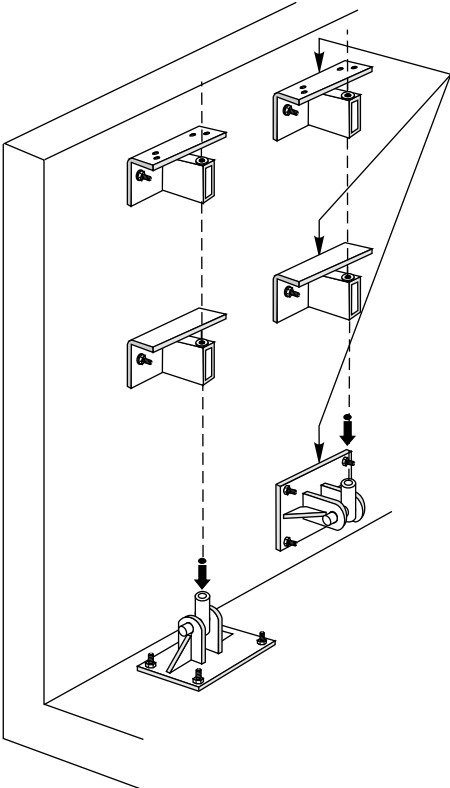
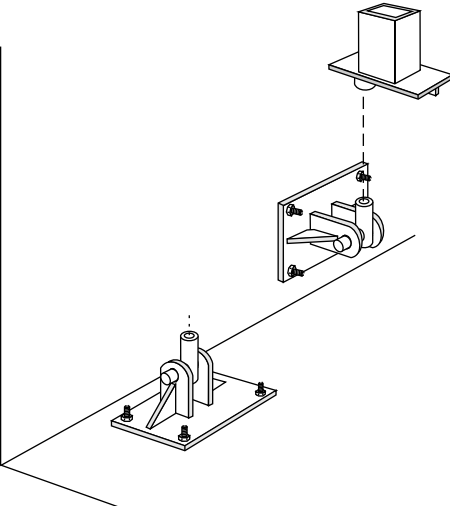
The lower bracket may be fixed to the tank bottom or to the wall.

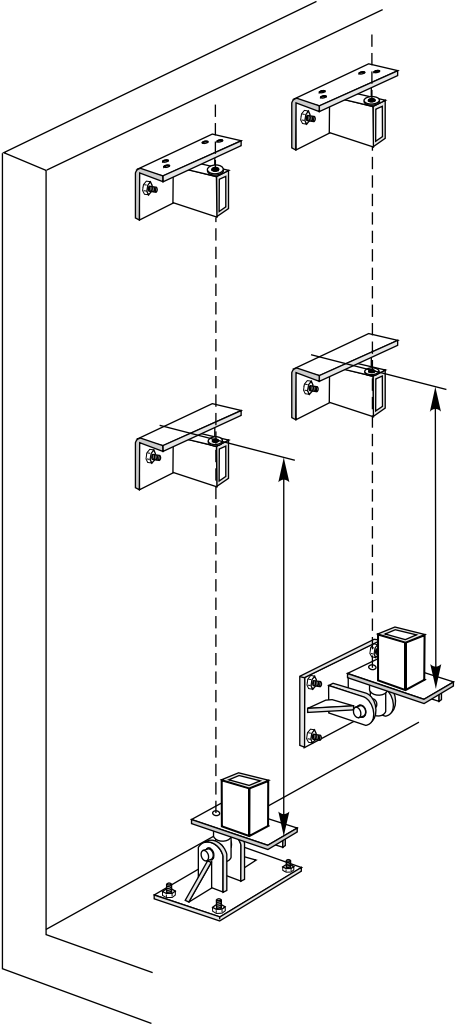
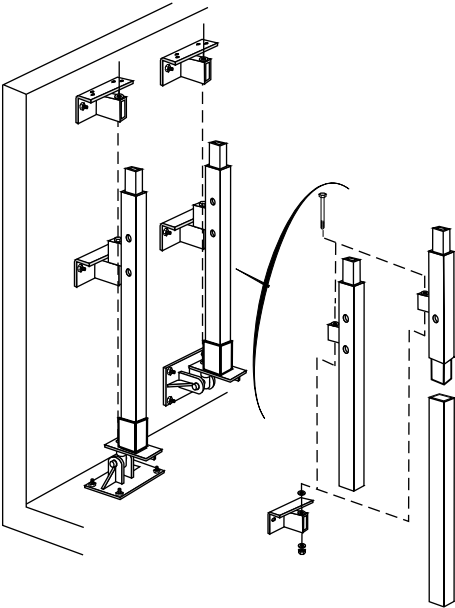
### Instruction

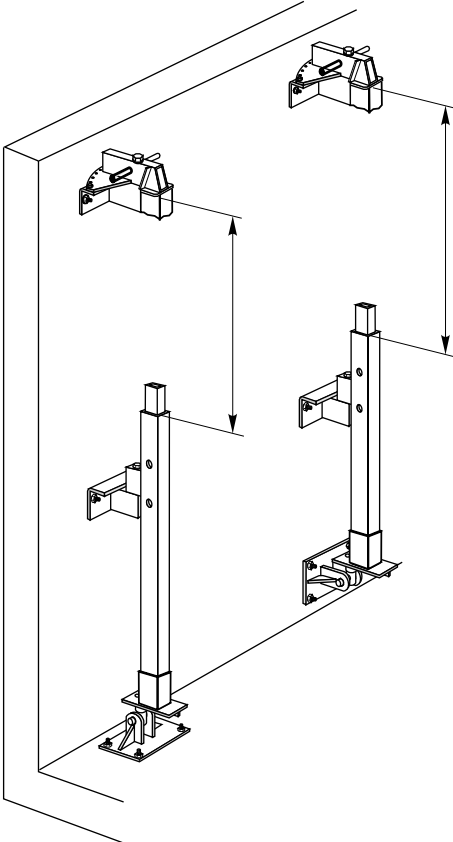
Follow these steps to install single guide bar system with intermediate support:

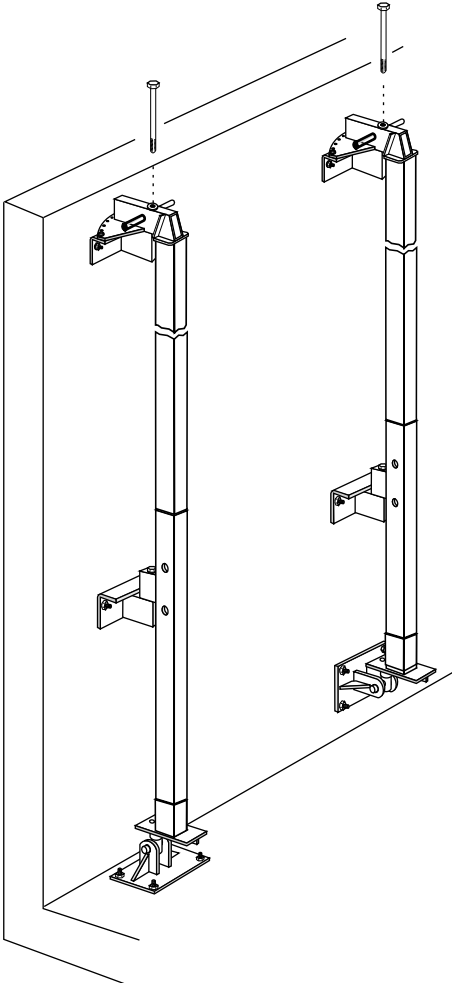
Step	Action	Illustration
1	Position the guide brackets. A = minimum 65 mm, recommended 125 mm.	
2	Fix the upper bracket.	

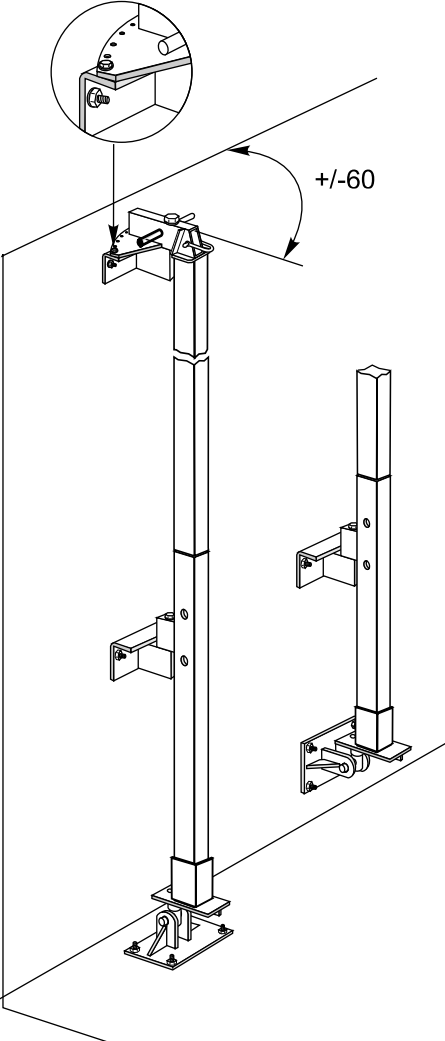
Step	Action	Illustration
3	<p>Check</p> <ul style="list-style-type: none"> <li>• the position of the lower bracket.</li> <li>• that the pin in the lower bracket is in line with the center line of the upper bracket. Use a plumb line.</li> </ul> <p><b>Wall mounted bracket:</b> It may be necessary to put metal shims under one of the brackets to achieve a vertical axis of rotation.</p>	
4	Fix the lower bracket.	

Step	Action	Illustration
5	<ul style="list-style-type: none"> <li>• Position the intermediate bracket.</li> <li>• Check that it is in line with the lower and upper brackets by using a plumb line.</li> <li>• If, necessary, add shims under the brackets to align the brackets.</li> <li>• Fix the intermediate bracket.</li> </ul>	
6	<p>Fit the lower guide to the lower bracket by positioning it to the pin.</p>	

Step	Action	Illustration
7	<ul style="list-style-type: none"> <li>• Measure the distance between the intermediate bracket and the lower guide.</li> <li>• If necessary, cut the bar.</li> </ul>	
8	<ul style="list-style-type: none"> <li>• Insert the lower extension bar to the lower guide.</li> <li>• Fit the bolt, but do not tighten.</li> </ul>	

Step	Action	Illustration
9	<ul style="list-style-type: none"> <li>• Measure the distance between the edge of the lower extension bar and the upper guide.</li> <li>• Subtract 10 mm from the measurement and cut the guide bar there.</li> </ul> <p><b>Note!</b> Make sure that the cut end of the guide bar points downwards.</p>	

Step	Action	Illustration
10	<ul style="list-style-type: none"> <li>• Insert the guide bar to the lower guide.</li> <li>• Insert the upper guide to the bar.</li> <li>• Fit the bolt, but do not tighten.</li> </ul>	

Step	Action	Illustration
11	<ul style="list-style-type: none"> <li>• Turn the guide bar unit to required angle.</li> <li>• Fix the angle H with the indexing screw.</li> <li>• Mount the shackle to the upper bracket.</li> </ul> <p>See chapter <a href="#">Positioning the mixer</a>, for correct angle setting.</p>	
12	<p><a href="#">Install the mixer on the single guide bar system.</a></p>	



# Install the Mixer

## Overview

### Introduction

1 This chapter describes how to install the mixer.

2

### NOTE!

All mounting to the floor shall be made with <b>chemical anchor bolts</b> from ITT Flygt.
---

---

### Table of Contents

This chapter contains the following topics:

#### Topic

Install with Cantilever Bar System .....	58
Install with Floor Mounted Bracket .....	58
Install with Hanging Bracket .....	62
Install with Adjustable Bracket .....	65
Install with Wall Mounted Bracket .....	68
Install with Bottom Fixing Plate.....	73

---

## Install with Cantilever Bar System

### Introduction

This section describes how to install the mixer on a cantilever bar system.

The cantilever bar system may be installed with four alternative brackets.

This section contains the following topics:

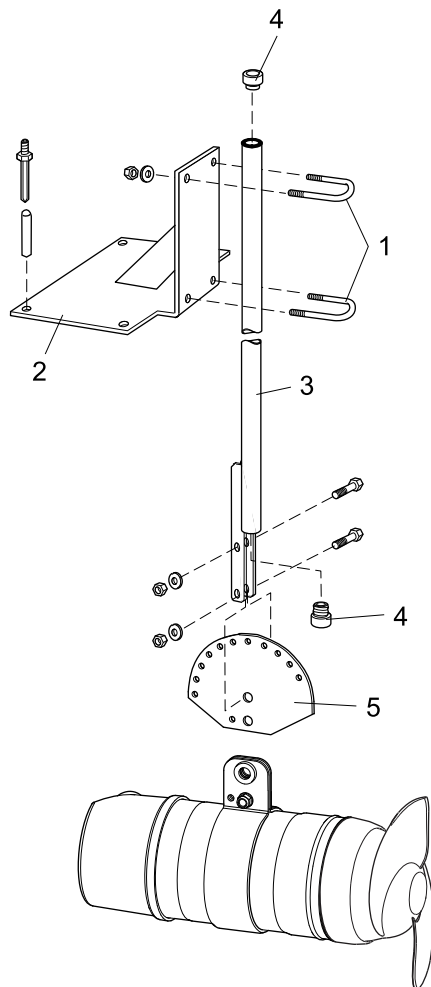
- [Install with Floor Mounted Bracket](#)
- [Install with Hanging Bracket](#)
- [Install with Adjustable Bracket](#) or
- [Install with Wall Mounted Bracket](#)

For measurements, see [Dimensional Drawings](#).

### Install with Floor Mounted Bracket

### Illustration

This is an illustration of the floor mounted bracket.

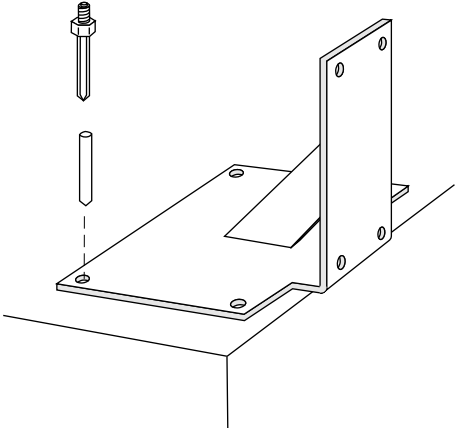
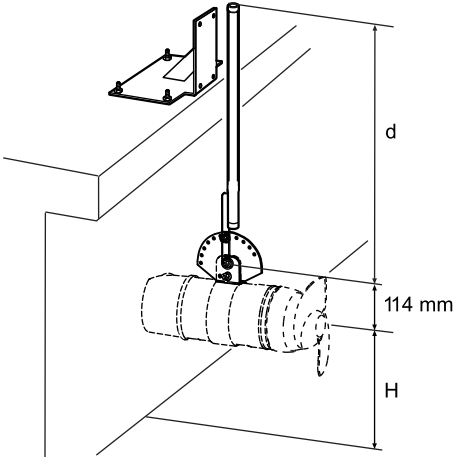


**List:** This is a list of the floor mounted brackets general parts:

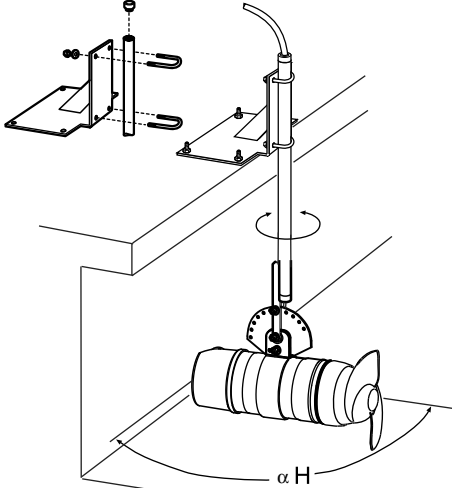
1. Clamp
2. Bracket
3. Guide bar
4. Bar plug
5. Lock plate

## Instruction

Follow these steps to install the mixer.

Step	Action	Illustration
1	Position the bracket. Fit the horizontal bracket either to <ul style="list-style-type: none"> <li>• concrete by means of chemical anchors <i>or</i></li> <li>• a steel plate by means of fixing bolts.</li> </ul>	
2	Measure the distance (d) where the mixer shall be positioned. If necessary, cut the bar. H = position of mixer relative to floor.	

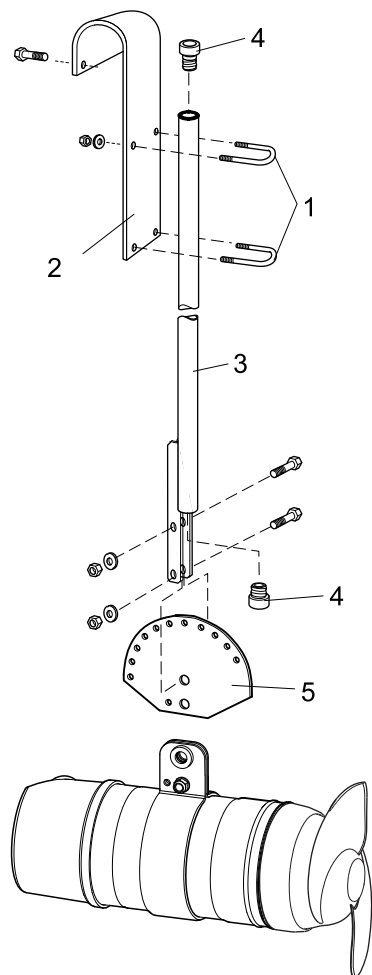
Step	Action	Illustration
3	<ul style="list-style-type: none"> <li>• Insert the lower bar plug.</li> <li>• Run the mixer power cable through the bar.</li> <li>• Insert the upper bar plug.</li> </ul>	
4	<ul style="list-style-type: none"> <li>• Fit the lock plate and the mixer to the end of the bar.</li> <li>• Adjust the vertical angle (<math>\alpha V</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Insert the indexing screw to prevent the lock plate from rotating.</li> </ul>	

Step	Action	Illustration
5	<ul style="list-style-type: none"> <li>• Place the bar on the bracket.</li> <li>• Adjust the unit to the horizontal angle (<math>\alpha H</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Lock it in position with the clamps.</li> </ul>	
6	<p>The mixer is now ready to be connected to the power supply. See, <a href="#">Electrical Installation</a></p>	

## Install with Hanging Bracket

### Illustration

This is an illustration of a hanging bracket.

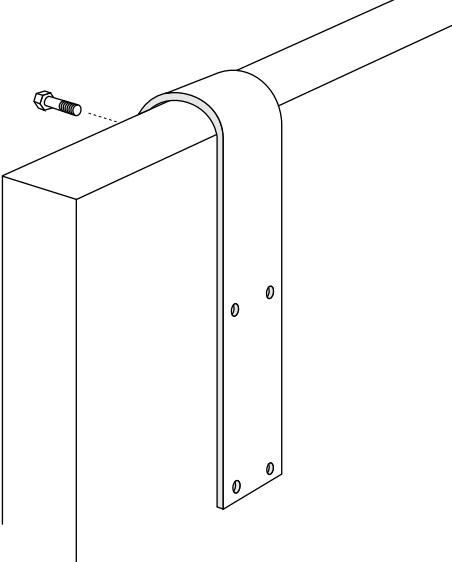
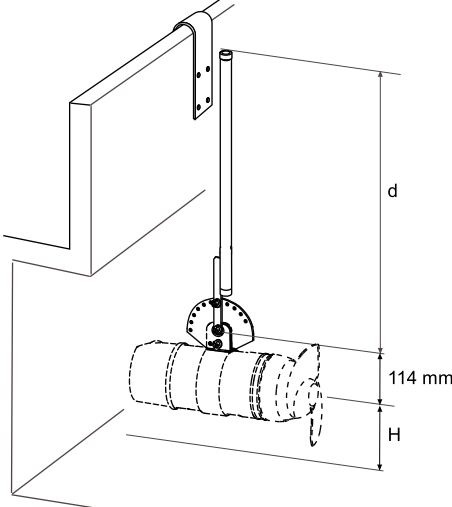
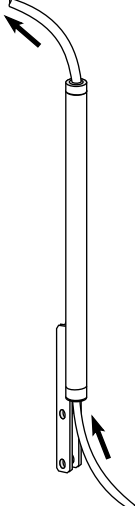


**List:** This is a list of the hanging brackets general parts:

1. Clamp
2. Gripping bracket
3. Guide bar
4. Bar plug
5. Lock plate

### Instruction

Follow these steps to install the cantilever bar system with hanging bracket.

Step	Action	Illustration
1	Position the bracket.	
2	Measure the distance (d) where the mixer shall be positioned. If necessary, cut the bar. H = position of mixer relative to floor.	
3	<ul style="list-style-type: none"> <li>• Insert the lower bar plug.</li> <li>• Run the mixer power cable through the bar.</li> <li>• Insert the upper bar plug.</li> </ul>	

Step	Action	Illustration
4	<ul style="list-style-type: none"> <li>• Fit the lock plate and the mixer to the end of the bar.</li> <li>• Adjust the vertical angle (<math>\alpha V</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Insert the indexing screw to prevent the lock plate from rotating.</li> </ul>	
5	<ul style="list-style-type: none"> <li>• Unscrew the gripping bracket.</li> <li>• Adjust the unit to the horizontal angle (<math>\alpha H</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Lock the unit in position with the clamps.</li> <li>• Fasten the bracket.</li> </ul>	
6	<p>The mixer is now ready to be connected to the power supply. See, <a href="#">Electrical Installation</a></p>	

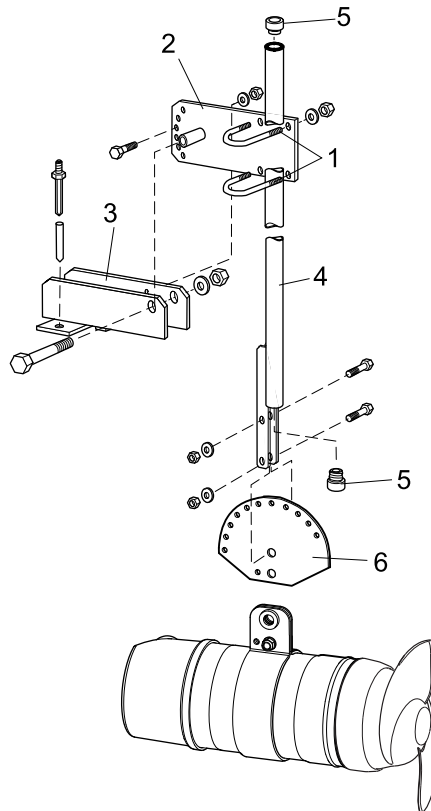


## Install with Adjustable Bracket

---

### Illustration

This is an illustration of the adjustable bracket.

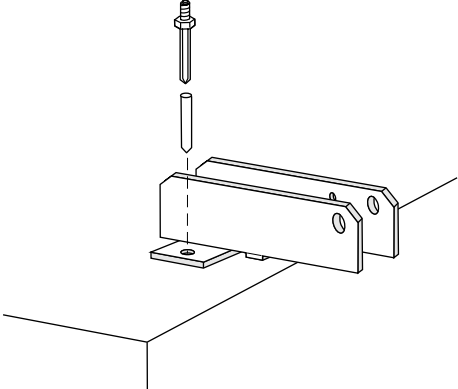
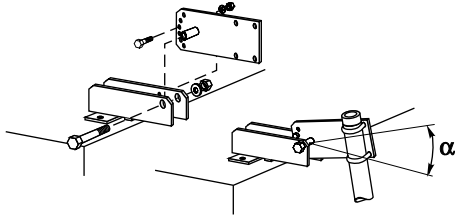
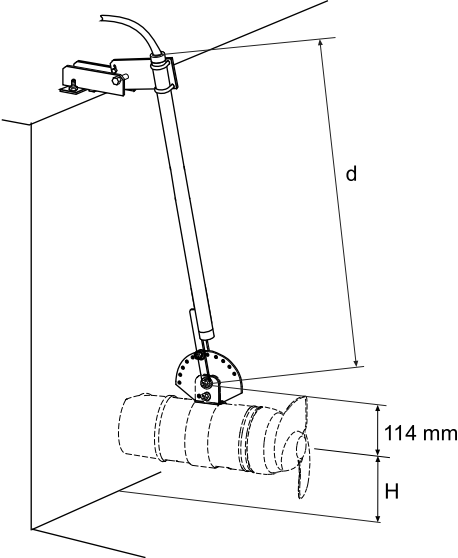


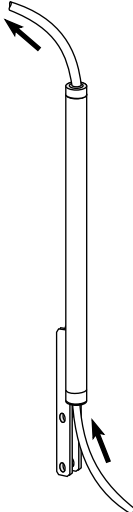
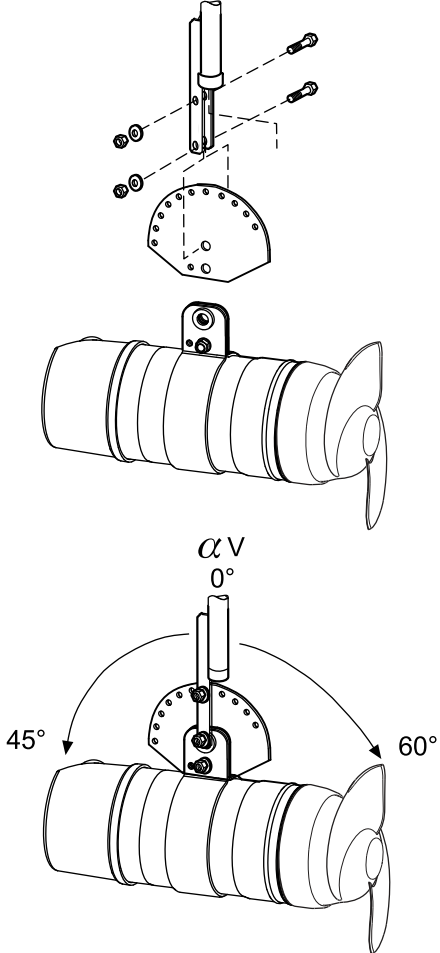
**List:** This is a list of the adjustable brackets general parts:

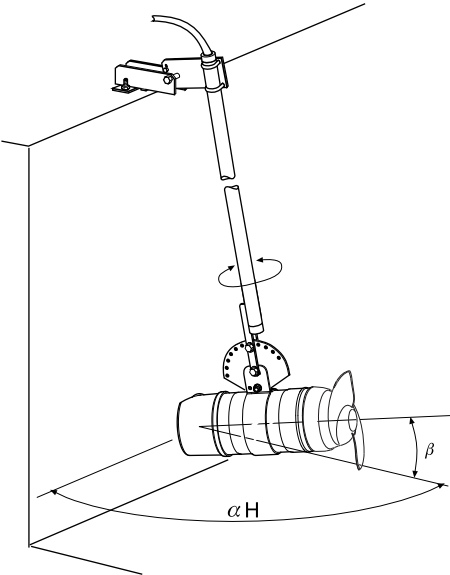
1. Clamp
  2. Lock plate
  3. Bracket
  4. Guide bar
  5. Bar plug
  6. Lock plate
-

## Instruction

Follow these steps to install the cantilever bar system with an adjustable bracket.

Step	Action	Illustration
1	Position the bracket. Fit the horizontal bracket either to <ul style="list-style-type: none"> <li>• concrete by means of chemical anchors <i>or</i></li> <li>• a steel plate by means of fixing bolts.</li> </ul>	
2	Place the lock plate in position on the bracket. Tighten the indexing screw.	
3	Measure the distance (d) where the mixer shall be positioned. If necessary, cut the bar. H = position of mixer relative to floor.	

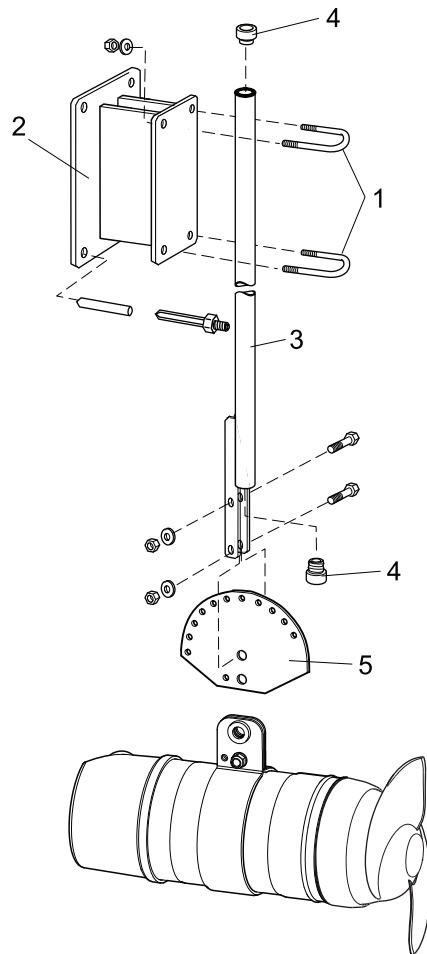
Step	Action	Illustration
4	<ul style="list-style-type: none"> <li>• Insert the lower bar plug.</li> <li>• Run the mixer power cable through the bar.</li> <li>• Insert the upper bar plug.</li> <li>• Fit the lock plate and the mixer to the end of the bar.</li> </ul>	
5	<ul style="list-style-type: none"> <li>• Fit the lock plate and the mixer to the end of the bar.</li> <li>• Adjust the vertical angle (<math>\alpha V</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Insert the indexing screw to prevent the lock plate from rotating.</li> </ul>	

Step	Action	Illustration
6	<ul style="list-style-type: none"> <li>Place the bar on the inclinable guide.</li> <li>Adjust the unit to the horizontal angle (<math>\alpha H</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>Lock the unit in position by means of the clamps.</li> </ul>	
13	<p>The mixer is now ready to be connected to the power supply. See, <a href="#">Electrical Installation</a></p>	

## Install with Wall Mounted Bracket

**Illustration**

This is an illustration of the wall mounted bracket.



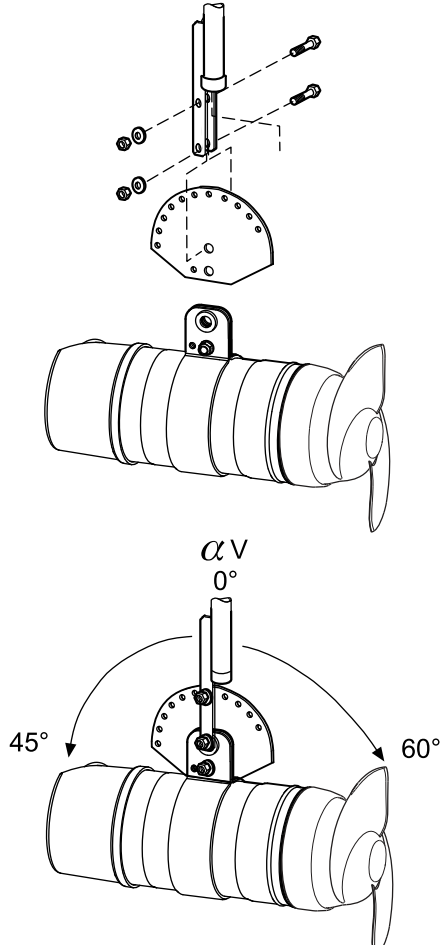
**List:** This is a list of the wall mounted brackets general parts:

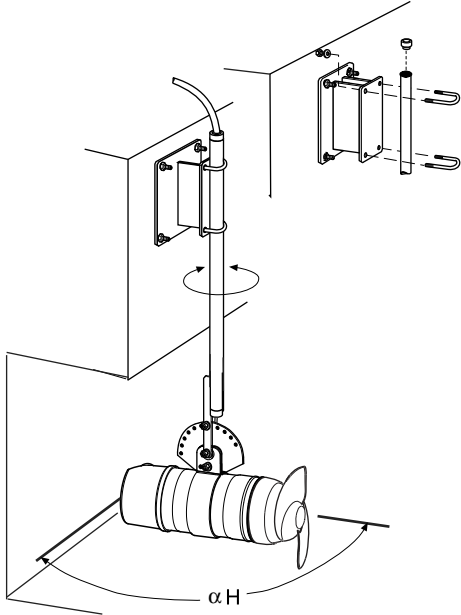
1. Clamp
2. Bracket
3. Guide bar
4. Bar plug
5. Lock plate

## Instruction

Follow these steps to install the Cantilever bar system with a wall mounted bracket.

Step	Action	Illustration
1	Position the bracket. Fit the horizontal bracket either to <ul style="list-style-type: none"> <li>• concrete by means of chemical anchors <i>or</i></li> <li>• a steel plate by means of fixing bolts.</li> </ul>	
2	Measure the distance (d) where the mixer shall be positioned. If necessary, cut the bar. H = position of mixer relative to floor.	
3	<ul style="list-style-type: none"> <li>• Insert the lower bar plug.</li> <li>• Run the mixer power cable through the bar.</li> <li>• Insert the upper bar plug.</li> </ul>	

Step	Action	Illustration
4	<ul style="list-style-type: none"> <li>• Fit the lock plate and the mixer to the end of the bar.</li> <li>• Adjust the vertical angle (<math>\alpha V</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Insert the indexing screw to prevent the lock plate from rotating.</li> </ul>	 <p>The illustration consists of three parts. The top part shows a lock plate with several screws being aligned with a vertical bar. The middle part shows a cylindrical mixer assembly with a propeller. The bottom part shows the mixer assembly being tilted at an angle <math>\alpha V</math> relative to the vertical. Arrows indicate that the angle can be set to <math>45^\circ</math> or <math>60^\circ</math>.</p>

Step	Action	Illustration
9	<ul style="list-style-type: none"> <li>• Adjust the unit to the horizontal angle (<math>\alpha H</math>). See, <a href="#">Positioning the mixer</a>, for correct angle setting.</li> <li>• Lock the unit in position by means of the clamps.</li> </ul>	
10	<p>The mixer is now ready to be connected to the power supply. See, <a href="#">Electrical Installation</a></p>	



## Install with Bottom Fixing Plate

---

### Introduction

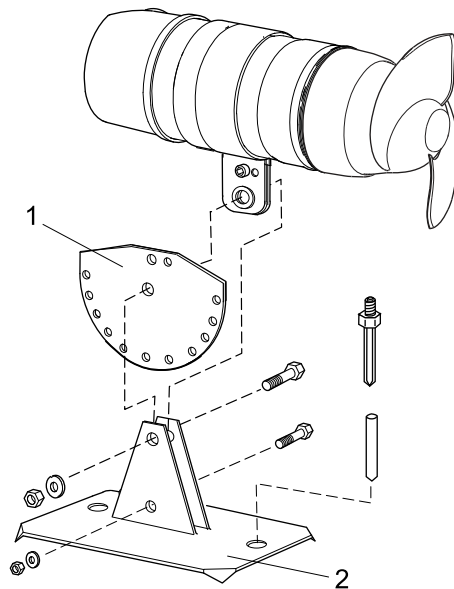
This chapter describes how to install the Mixer on a bottom fixing plate.

For measurements, see [Dimensional Drawings](#).

---

### Illustration

This illustration shows the general parts of a bottom fixing plate system.



List: This is a list of general parts in a bottom fixing plate system:

1. Lock plate
  2. Bracket
-

## Instruction

Follow these steps to install the mixer in a fixing plate system:

Step	Action	Illustration
1	Position the bracket. Fit the horizontal bracket either to <ul style="list-style-type: none"> <li>• concrete using chemical anchors <i>or</i></li> <li>• a steel plate using fixing bolts.</li> </ul>	
2	Fix the lock plate and the bottom plate.	
3	Adjust the vertical angle ( $\alpha V$ ). See, <a href="#">Positioning the mixer</a> , for correct angle setting.	
4	The mixer is now ready to be connected to the power supply. See, <a href="#">Electrical Installation</a>	

---

# Electrical Installation

## Overview

---

### Table of Contents

This chapter contains the following topics:

<b>Topic</b>	
Power Supply .....	76
Connection .....	77
Cable Connection Diagrams .....	78
Cable Connection to Controller .....	80

---

---

## Power Supply

### NOTE!

Fused rating and cable shall be selected in accordance with local rules and regulations.

---

### Cables

Always check that the cables are in perfect condition before using them.

- Make sure that the cable does not have any sharp bends and is not pinched.
  - If the outer sheath is damaged, contact a Flygt service shop to replace the cable.
  - Make sure that the conductors not in use are isolated
  - If a variable-frequency-drive (VFD) is used, make sure that the shielded cable (type NSSHÖU.../3E+St) is used according to the European CE requirements. **Reference:** For more information contact your Flygt representative VFD-supplier.
- 

### Information on current

See the product's data plate.

### NOTE!

Pay attention to the voltage drop in long cables! The motor's rated voltage is the voltage measured at the terminal board in the product.

---

### Overload protection

The Starting current in direct-on-line starting can be up to six to ten times higher than the rated current. Therefore, make sure that

- the fuses or circuit breakers are of proper rating.
  - the overload protection (motor protection breaker) for direct-on-line starting are set to the motor rated current stated on the data plate.
-

## Connection

---

### Grounding

Make sure that the product is correctly grounded.

The ground conductor shall always be longer than the phase conductors. **Rationale:** If the motor cable is jerked loose by mistake, the ground conductor should be the last conductor to be disconnected from its terminal. This applies to both ends of the cable.

---

### Earthing

Make sure that the product is correctly earthed.

The earth conductor shall always be longer than the phase conductors. **Rationale:** If the motor cable is jerked loose by mistake, the earth conductor shall be the last conductor to be disconnected from its terminal. This applies to both ends of the cable.

---

## Cable Connection Diagrams

### SUBCAB 4GX / SUBCAB AWG Y and D Connection

This is an illustration of how to connect the cable leads and the stator leads.

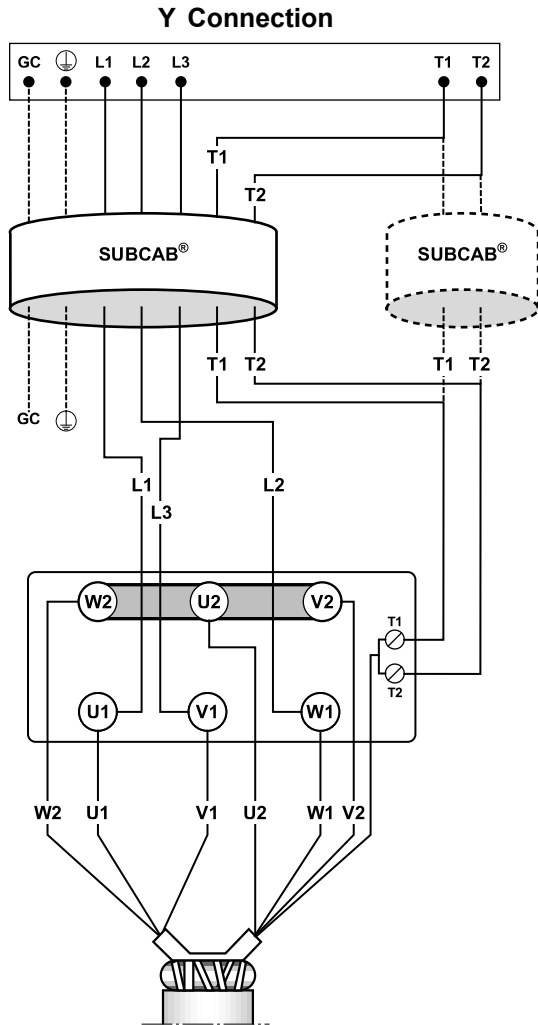


Bild 47

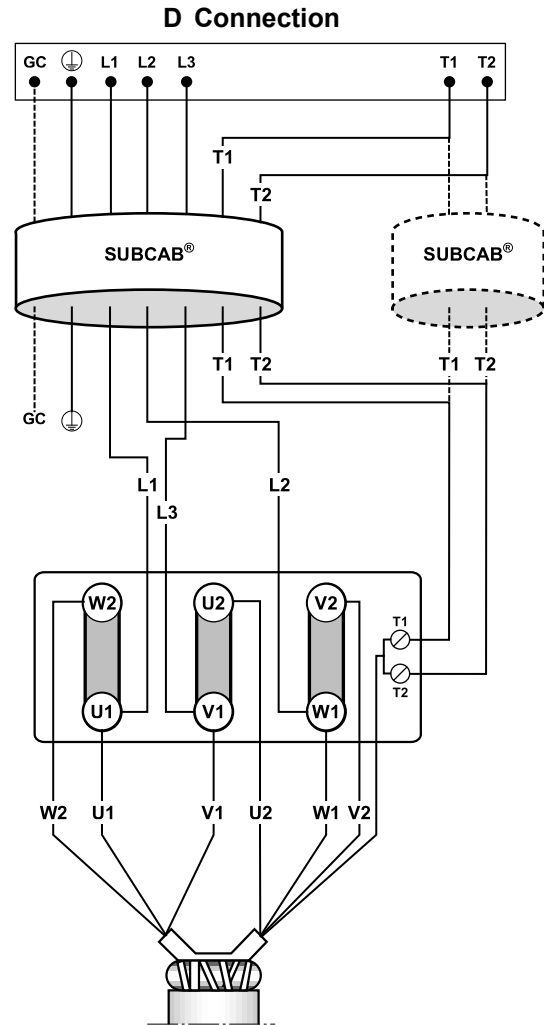


Bild 43

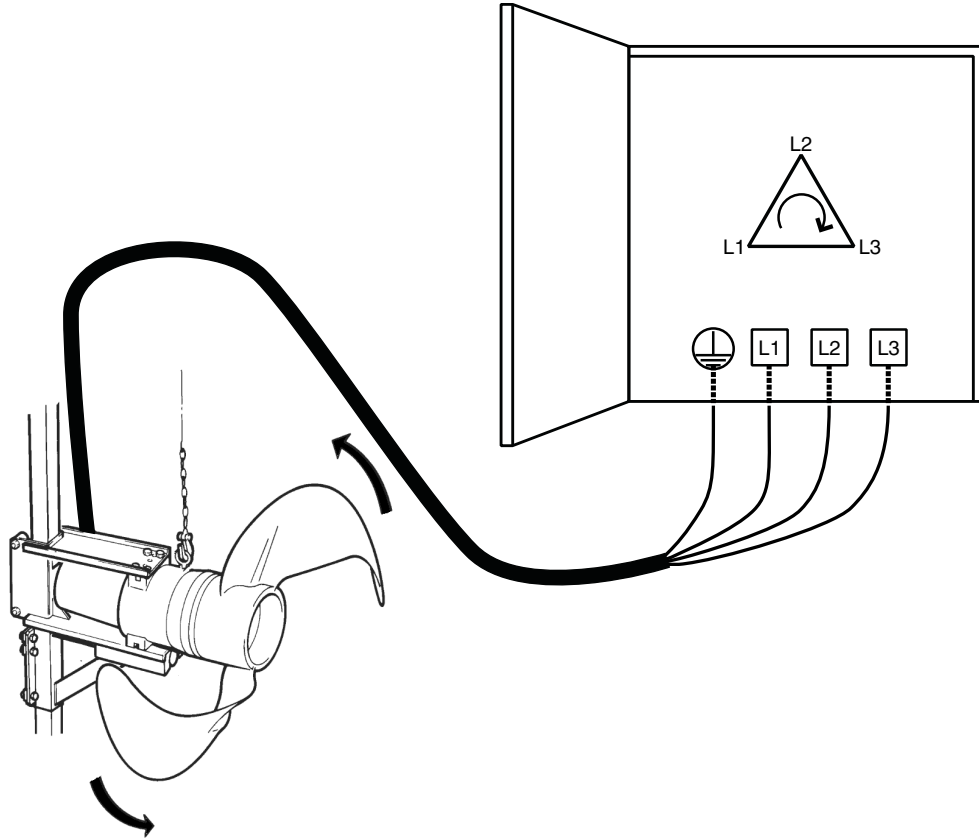
This table explains the colors of the leads.

Mains	SUBCAB Cable lead	SUBCAB AWG Cable lead	Terminal board
L1	Brown	Red	U1
L2	Black	Black	W1
L3	Grey	White	V1
	Yellow/Green	Yellow/Green	
Groundcheck GC		Yellow	
<b>Control</b>			

T1	T1	Orange	T1
T2	T2	Blue	T2
<b>Stator leads connection:</b>		<b>Terminal board</b>	
<b>Stator lead</b>			
U1, red		U1	
W2, black		W2	
V1, brown		V1	
U2, green		U2	
W1, yellow		W1	
V2, blue		V2	

## Cable Connection to Controller

This illustrates how to connect the product's power cable to the controller.



Main leads	Type of cable	
	SUBCAB NSSHÖU Silicon HCR	SUBCAB AWG
⏚	Green/Yellow	Green/Yellow
L1	Brown	Red
L2	Black	Black
L3	Grey	White



## Set up the Controller


### Thermal Switches

The terminal switches are incorporated in the stator and shall be connected according to the cable chart. Flygt recommends that they are connected to 24 V over the separate fuses to protect the automatic equipment.

### Additional sensors

The terminal A plate in the junction box shows if the product is equipped with other sensors than thermal contacts.

This table gives an overview of possible additional sensors for this product.

Sensor	Description
CLS-30	<p>A leakage sensor that</p> <ul style="list-style-type: none"> <li>• senses water in the oil housing, <i>and</i></li> <li>• initiates an alarm when the oil contains 30% water.</li> </ul> <p>Not applicable to Ex-approved pumps.</p> <div style="display: flex; align-items: center;">  <div style="border: 1px solid black; padding: 5px;"> <p><b>WARNING!</b></p> <p>Sensor body is made of glass!</p> <p>Handle with care!</p> </div> </div>
FLS	<p>A small float switch for sensing water in the stator housing.</p> <p>Design suitable for products in vertical installations.</p>

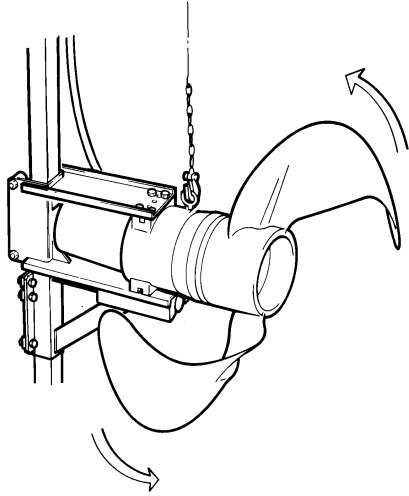

### Monitoring relay

If intermittent operation is prescribed (see data plate), the product shall be provided with control equipment that provides it. The Mini-CAS II is a monitoring relay to which the CLS and/or FLS are connected.



## First Start-Up

**Before starting** Follow these steps when test-running the mixer.

Step	Action	Illustration
1	Check: <ul style="list-style-type: none"> <li>• that there is oil in the oil casing</li> <li>• that the propeller can be rotated by hand</li> <li>• that the cable entry is securely tightened</li> <li>• that the machine is fixed to the guide bar</li> </ul> <p><b>NOTE!</b> Maximum starts and stops are 30 times.</p>	
2	Check the direction of rotation. The propeller shall rotate clockwise as viewed from the motor side. <div style="display: flex; align-items: center; margin-top: 10px;">  <div style="border: 1px solid black; padding: 5px;"> <p><b>WARNING!</b></p> <p>Watch out for the propeller and for the starting jerk, which can be powerful.</p> </div> </div>	



# Trouble Shooting

## Overview

- 1 Trouble shooting shall be done with the power supply disconnected and locked off, except for those checks which cannot be performed without voltage.
- 2 Always make sure that there is no one near the mixer when the power supply is turned on.
- 3 When trouble shooting on the electrical equipment use:
  - a universal instrument multimeter (VOM)
  - a test lamp (continuity tester) *and*
  - wiring diagram.

## NOTE!

Electrical work shall be performed by an authorized electrician.

- 4 Follow local safety regulations and observe recommended safety precautions.
- 

## Table of Contents

This chapter contains the following topics:

### Topic

If the Mixer Fails to Start.....	86
If the Mixer Starts but Motor Protection Trips.....	87
If the Mixer Starts, Stops and Starts in a Rapid Sequence .....	88

---

Use the following checklists as an aid at trouble shooting. It is assumed that the mixer and installation have formerly functioned satisfactorily.



## If the Mixer Fails to Start

Follow these steps to troubleshoot the mixer when it fails to start.

No	Question	No	Yes
1	Is an alarm signal indicated on the control panel?	Check question No 2.	<ul style="list-style-type: none"> <li>• Check that the overload protection is reset.</li> <li>• Check the thermal switches.</li> </ul> If the thermal switches are out of order, contact an ITT Flygt service shop.
2	Can the mixer be started manually?	Check question No 3.	<ul style="list-style-type: none"> <li>• Check that all connections are intact.</li> <li>• Check relay and contactor coils.</li> <li>• Check that the control switch (Man/Auto) makes contact in both positions.</li> </ul>
3	Is the installation receiving voltage?	Check that <ul style="list-style-type: none"> <li>• the main power switch is on.</li> <li>• there is control voltage to the start equipment and its fuses are intact.</li> <li>• there is voltage in each phase of the supply line.</li> <li>• all fuses have continuity and are tight.</li> <li>• the overload protection is reset.</li> <li>• the motor cable is not damaged.</li> </ul>	Check question No 4
4	Is the propeller stuck? <b>WARNING!</b> Disconnect power before checking the propeller.	Check question No 5	<ul style="list-style-type: none"> <li>• Check that the propeller rotates easily by hand.</li> <li>• Clean the propeller.</li> </ul>
5	Does the fault still exist?		Contact an ITT Flygt service shop.

## If the Mixer Starts but Motor Protection Trips

Follow these steps to trouble shoot the mixer when the mixer starts but the motor protection trips.

No	Question	No	Yes
1	Is the motor protection set too low?	Check question No 2.	Set the motor protection according to the data plate.
2	Is the propeller difficult to rotate by hand? WARNING: disconnect power before checking the propeller!	Check question No 3	<ul style="list-style-type: none"> <li>• Clean the propeller.</li> <li>• Check that the propeller size is correct.</li> </ul> If none of these actions helps, contact an ITT Flygt service shop.
3	Is the installation receiving full voltage on all three phases?	<ul style="list-style-type: none"> <li>• Check the motor fuses.</li> <li>• Notify an authorized electrician.</li> </ul>	Check question No 4.
4	Have all the phase currents the same value or are they too high?	Check question No 5.	Contact an ITT Flygt service shop.
5	Is the rated speed in accordance with the data plate?	Check question No 6.	Contact an ITT Flygt service shop.
6	Is the density of the liquid too high?	Check question No 7.	<ul style="list-style-type: none"> <li>• Dilute the liquid.</li> <li>• Change the propeller blades or to a more suitable mixer.</li> <li>• Contact an ITT Flygt service shop.</li> </ul>
7	Fault on the overload protection?	Check question No 8.	Replace the overload protection.
8	Does the fault still exist?	-	Contact an ITT Flygt service shop.

## If the Mixer Starts, Stops and Starts in a Rapid Sequence

If the contactor's selfholding function break, check

- the contactor connections.
- the voltage in the control circuit in relation to the rated voltage on the coil.

If the contactor's selfholding function is ok and the fault still exist, contact an ITT Flygt service shop.



### **WARNING!**

Do not override the motor protection repeatedly if it has tripped!







[www.flygt.com](http://www.flygt.com)

Installation, Operation and Maintenance

Mixer 4620

896505/4.0 - 20060625

© ITT Flygt AB, Printed in Sweden